


Rear Seat Cushion Trim Cover Replacement


Removal Procedure

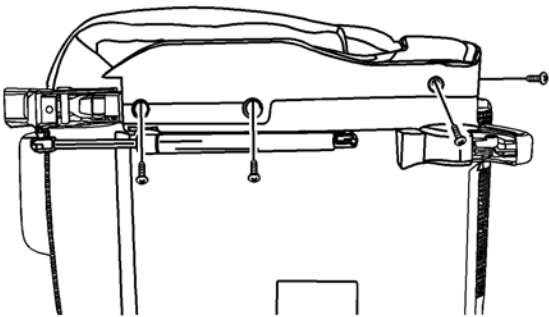

1. Remove the rear seat from the vehicle. Refer to [Rear Seat Replacement](#) .
2. Remove the screws and the rear seat trim.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

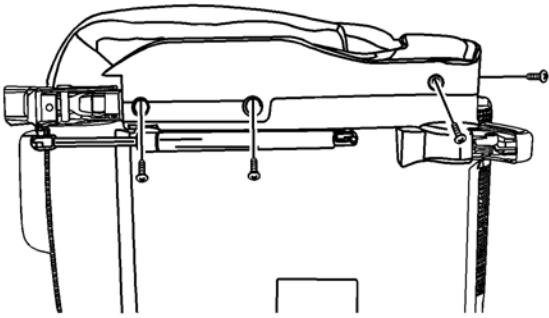

1. Install the rear seat trim with the screws.

Tighten
Tighten the rear seat trim screws to 12 N·m (9 lb ft).

2. Install the rear seat from the vehicle. Refer to [Rear Seat Replacement](#) .