


Outer Belt Sealing Strip Replacement (C 105/Short Body)


Removal Procedure

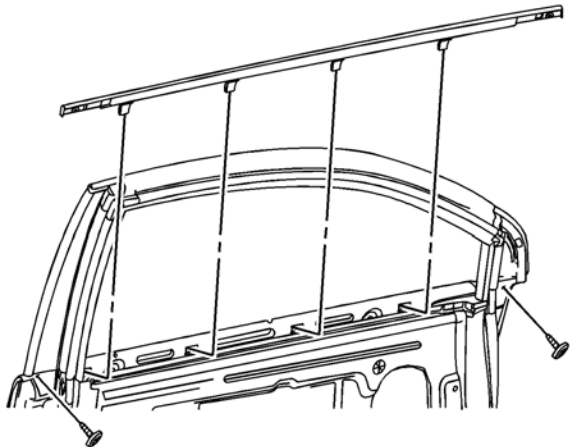

1. Lower the window completely.
2. Remove the window outer sealing strip screws.
3. Remove the outside rearview mirror. Refer to [Mirror Replacement](#) .
4. Lift the window outer sealing strip off the door.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

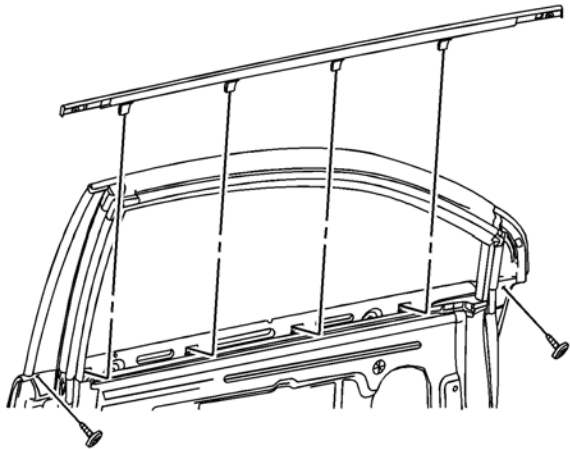

1. Press the outside channel molding onto the door.
2. Install the window outer sealing strip screws.

Tighten

Tighten the window outer sealing strip screws to 1.3 N·m (12 lb in).

3. Install the outside rearview mirror. Refer to [Mirror Replacement](#) .
4. Raise the window.