



Bucket Seat Replacement

Removal Procedure

Caution: Refer to [Battery Disconnect Caution](#) in Cautions and Notices.

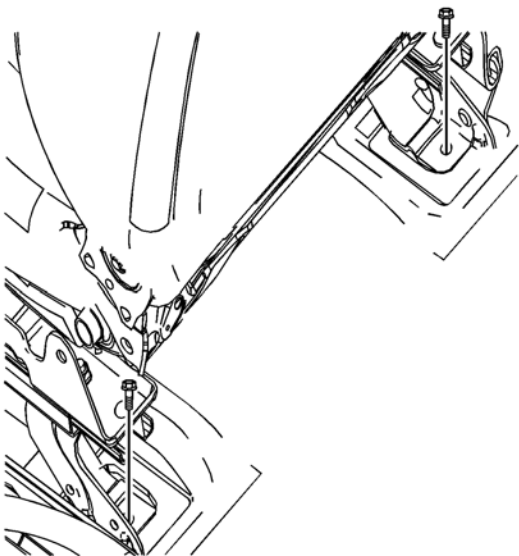


1. Disconnect the negative battery cable.
2. Remove the plastic caps and the bolts securing the rear portion of the front seat to the floor.

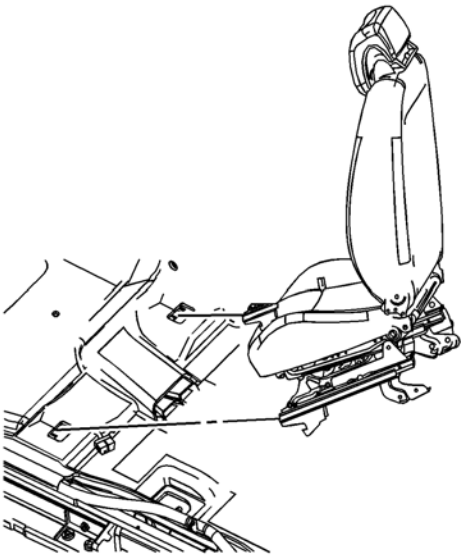

3. Disconnect the electrical connectors.
4. Remove the seat.

Installation Procedure

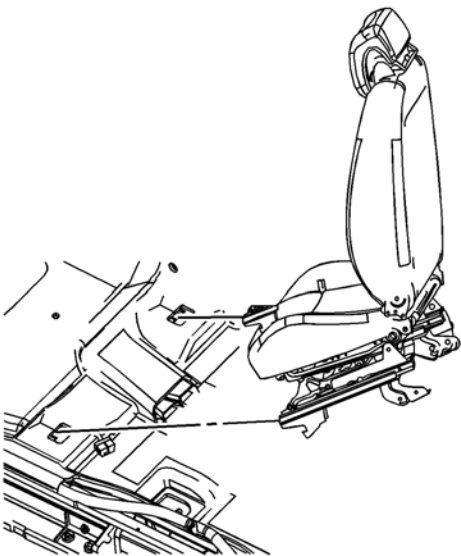

1. Install the seat.
2. Connect the electrical connectors.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.