



Front Seat Cushion Replacement

Removal Procedure

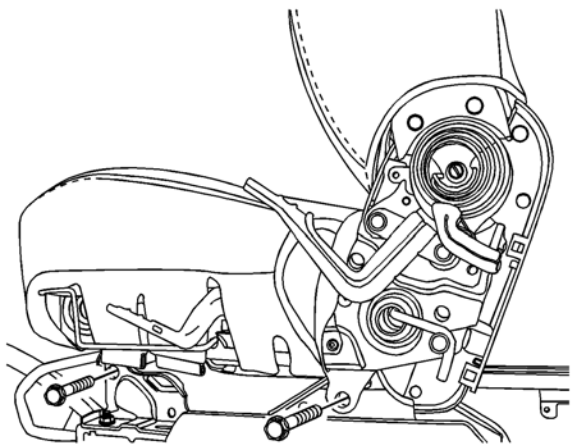

1. Remove the front seat from the vehicle. Refer to [Bucket Seat Replacement](#) .
2. Remove the seat trims.
3. Remove the seat cushion bolts.
4. Remove the cushion from the seat track.

Installation Procedure

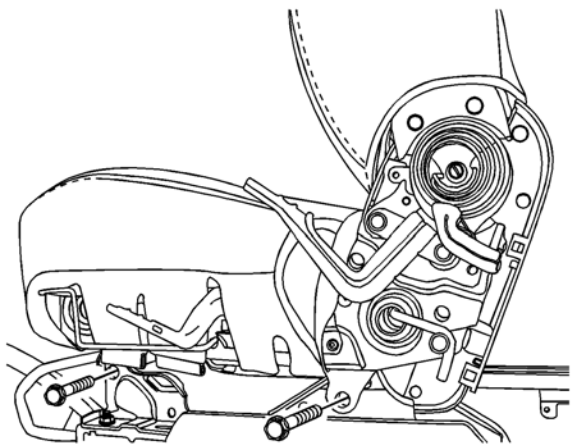

1. Install the cushion onto the seat track.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

2. Install the seat cushion with the bolts.

Tighten

Tighten the front seat cushion bolts to 12 N·m (9 lb ft).

3. Install the seat trims.
4. Install the front seat in the vehicle. Refer to [Bucket Seat Replacement](#) .