


Rear Door Opening Weatherstrip Replacement


Removal Procedure

1. Remove the rear door sill plate. Refer to [Rear Side Door Sill Plate Replacement](#) .

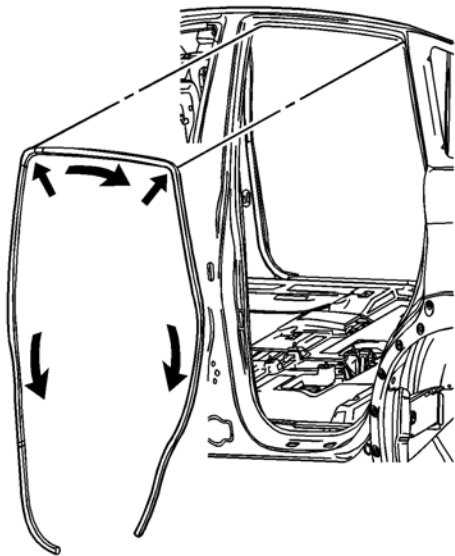

2. Remove the rear door opening weather strip.

Installation Procedure

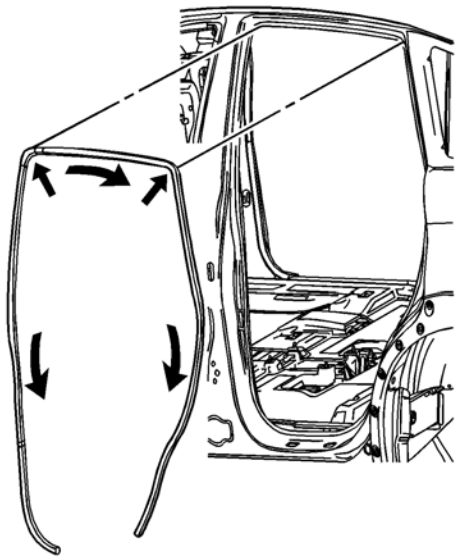

1. Install the rear door opening weather strip.
2. Install the rear door sill plate. Refer to [Rear Side Door Sill Plate Replacement](#) .