


Rear Seat Back Replacement


Removal Procedure

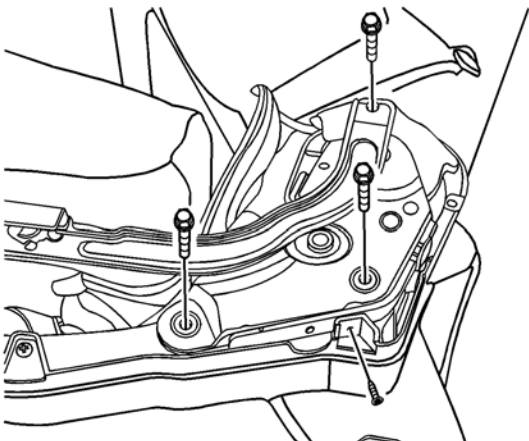

1. Remove the rear seat from the vehicle. Refer to [Rear Seat Replacement](#) .
2. Remove the rear seat trim. Refer to [Rear Seat Cushion Trim Cover Replacement](#) .
3. Remove the bolts both sides of the rear seat.
4. Remove the rear seatback.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

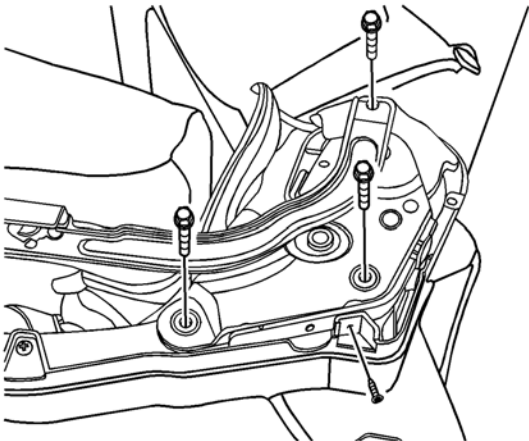

1. Install the rear seatback with the bolts.

Tighten

Tighten the rear seatback bolts to 12 N·m (9 lb ft).

2. Install the rear seat trim. Refer to [Rear Seat Cushion Trim Cover Replacement](#) .
3. Install the rear seat in the vehicle. Refer to [Rear Seat Replacement](#) .