


Windshield Washer Hose Replacement

Removal Procedure


Important: The left-hand drive is shown. The right-hand drive is similar.

1. Remove the air inlet grille. Refer to [Air Inlet Grille Panel Replacement](#) .

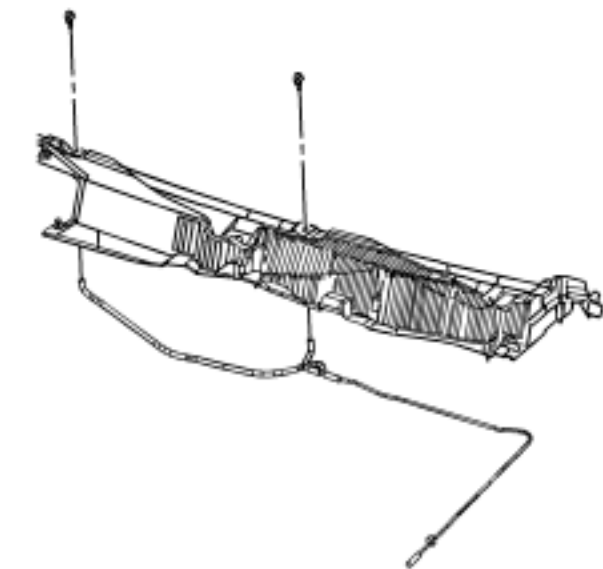

2. Separate the front washer nozzle hose from the front washer solvent container hose that runs along the upper motor compartment rail.
3. Remove the front washer nozzle hose.

Installation Procedure

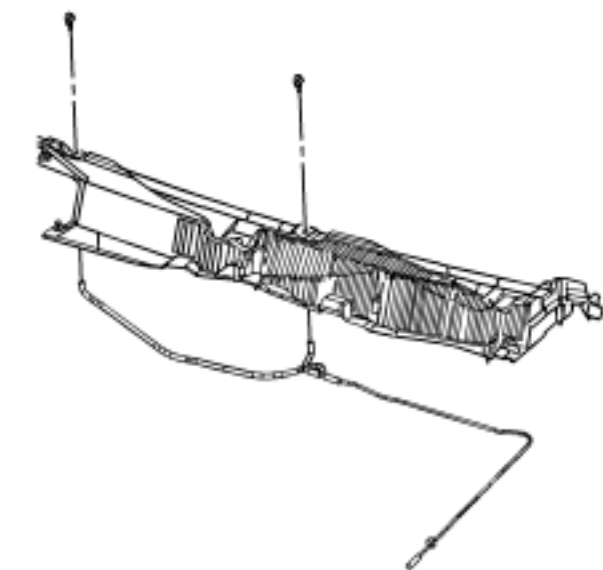

1. Connect the front nozzle hose to the front washer solvent container hose that runs along the upper motor compartment rail.
2. Position the washer hoses into the vehicle.
3. Install the air inlet grille. Refer to [Air Inlet Grille Panel Replacement](#) .