




- 8. Remove the power steering gear to front suspension crossmember bolts.
- 9. Support the front suspension crossmember by a jack stand.

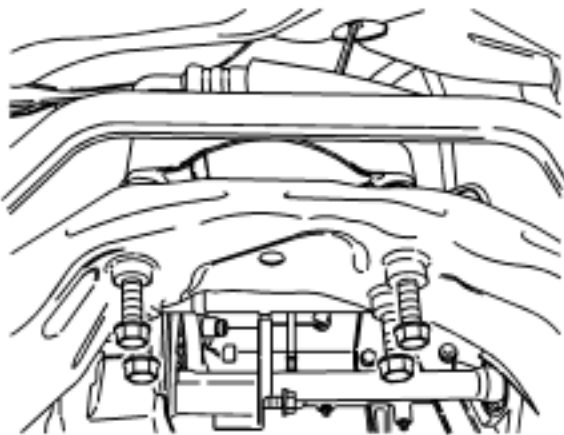

- 10. Remove the front suspension crossmember to transmission rear mount bracket bolts.

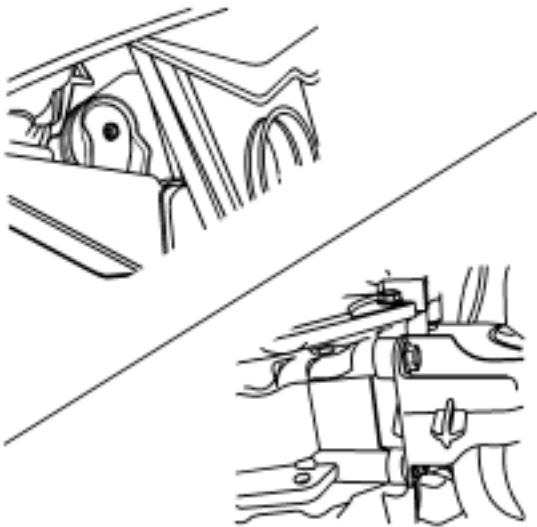

- 11. Remove the transmission front mount to front suspension crossmember bolt and remove the mount.

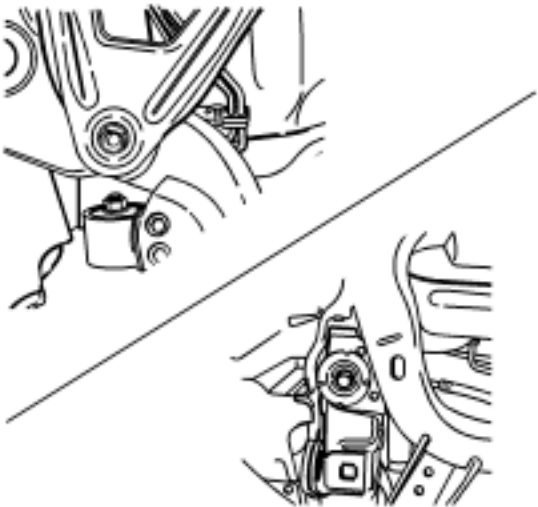

- 12. Remove the front suspension crossmember to body bolts.