


6. Install the transmission front mount and install the front suspension crossmember to transmission front mount bolt.

Tighten


- Tighten the transmission front mount to transmission bolts to 50 N·m (37 lb ft).
- Tighten the front suspension crossmember to transmission front mount bolt to 110 N·m (81 lb ft).

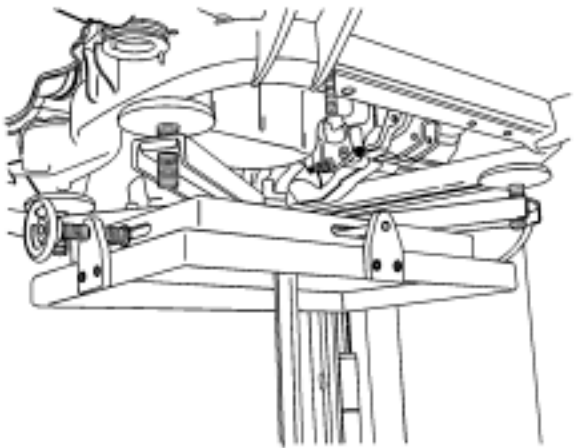

7. Install the power steering gear to front suspension crossmember bolts.

Tighten

Tighten the power steering gear to front suspension crossmember bolts to 110 N·m (81 lb ft).

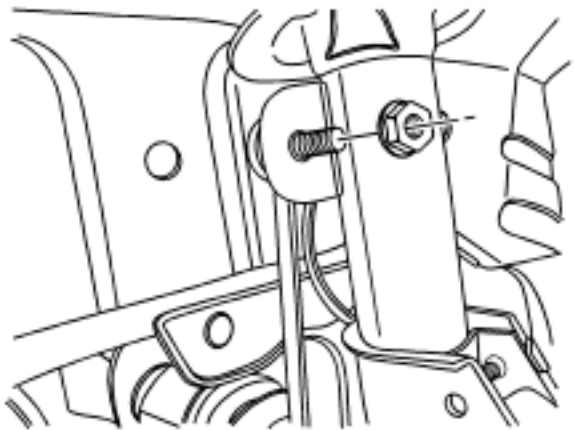

8. Install the stabilizer shaft link to strut nut.

Tighten

Tighten the stabilizer shaft link nut to 65 N·m (48 lb ft).

9. Install the tie rod to knuckle nut.

Tighten

Tighten the tie rod to knuckle nut to 50 N·m (37 lb ft).