


## Resonator Replacement (2.0L Diesel)


### Removal Procedure

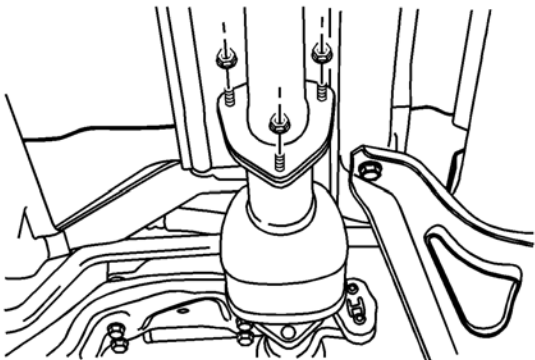


**Caution:** In order to avoid being burned, do not service the exhaust system while it is still hot. Service the system when it is cool.

**Notice:** When inspecting or replacing exhaust system components, make sure there is adequate clearance from all points on the underbody to prevent overheating of the floor pan and possible damage to the passenger compartment insulation and trim materials.

1. Remove the nuts and the gasket from the front muffler pipe-to-DPF.

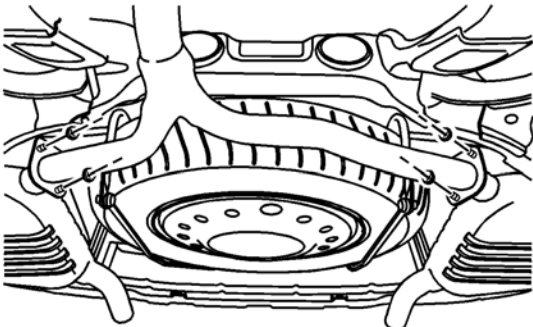

2. Remove the nuts and the gaskets from the both rear muffler pipe flange.

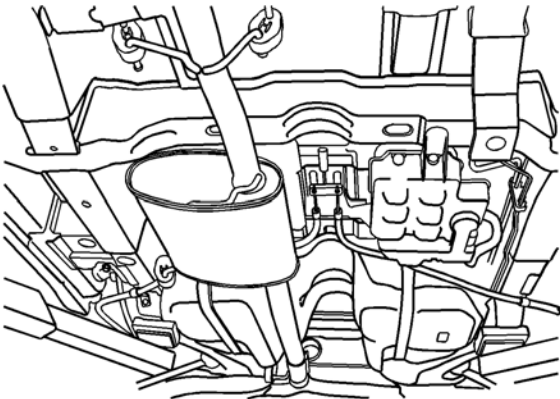

3. Remove the rubber hangers.
4. Remove the front muffler.

### Installation Procedure