




- 14. Remove the body control module. Refer to [Body Control Module Replacement](#) .
- 15. Remove the steering wheel. Refer to [Steering Wheel Replacement](#) .
- 16. Remove the headlamp switch. Refer to [Headlamp Switch Replacement](#) .
- 17. Remove the wiper/washer switch. Refer to [Windshield Wiper and Washer Switch Replacement](#) .

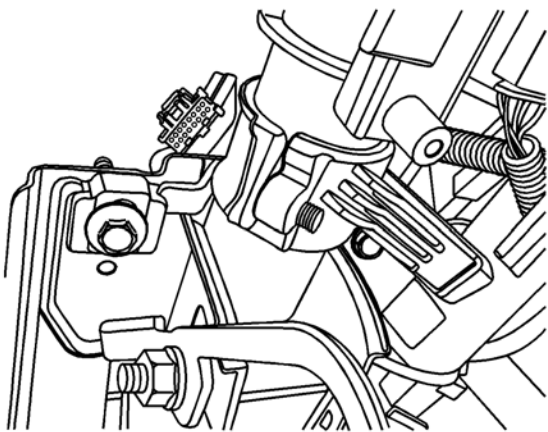


- 18. Remove the nuts and the bolts securing the steering column.
- 19. Disconnect the steering column electrical connector.
- 20. Lower the steering column.
- 21. Remove the A-pillar trim.

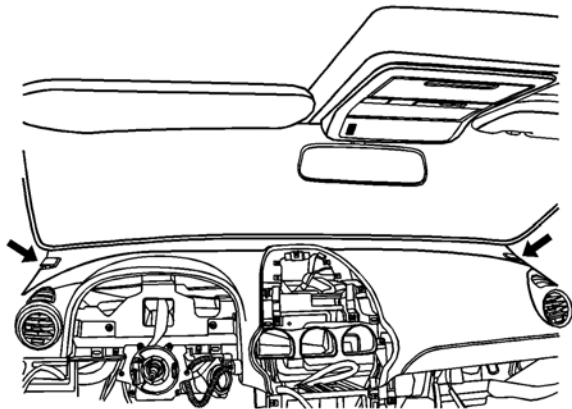

- 22. Remove the instrument panel bolts below the windshield.

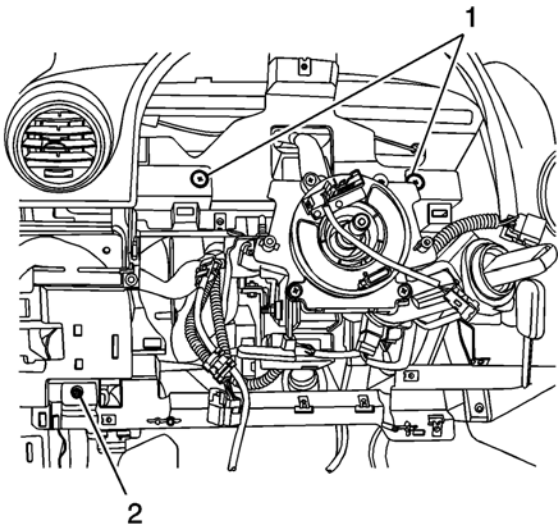

- 23. Remove the screws (1) and the left lower instrument panel retaining bolt (2).

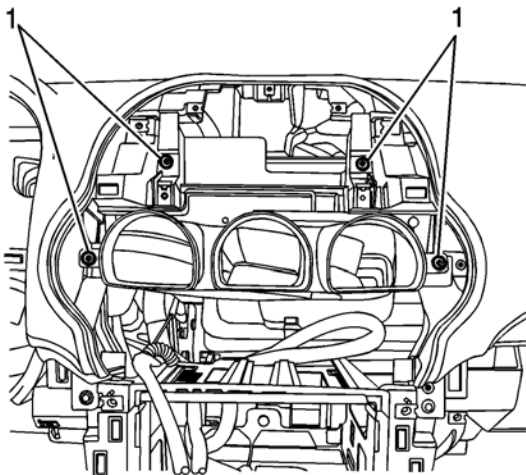

- 24. Remove the screws (1) securing the instrument panel center.