


10. Remove the upper fender bolts and the fender.
11. Remove the fender wheel opening molding, if equipped. Refer to [Front Fender Wheel Opening Molding Replacement](#) .
12. Remove the fender insulator, if necessary. Refer to [Front Fender Insulator Replacement](#) .
13. Remove the fender vent grille, if necessary.

**Installation Procedure**

1. Install the fender vent grille, if removed.
2. Install the fender insulator, if removed. Refer to [Front Fender Insulator Replacement](#) .
3. Install the fender wheel opening molding, if removed. Refer to [Front Fender Wheel Opening Molding Replacement](#) .


**Notice:** Refer to [Fastener Notice](#) in the Preface section.

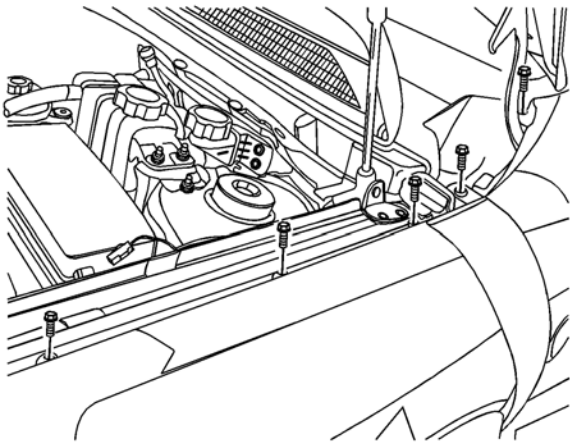

4. Install the fender with the upper fender bolts.

**Tighten**

Tighten the upper fender bolts to 10 N·m (89 lb in).

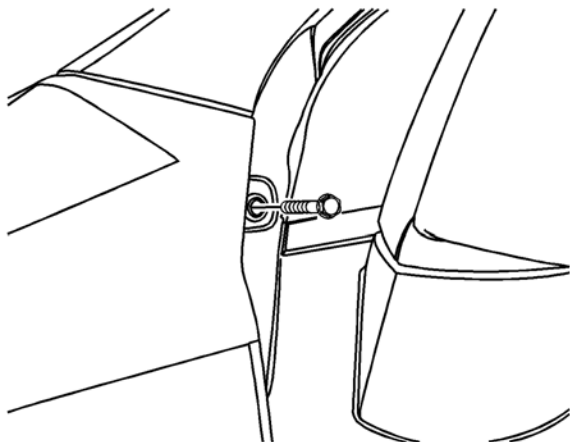

5. Install the bolt at the base of the A-pillar.

**Tighten**

Tighten the A-pillar fender bolt to 10 N·m (89 lb in).