


Tail Lamp Replacement

Removal Procedure


Caution: Refer to [Battery Disconnect Caution](#) in Cautions and Notices.

1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .

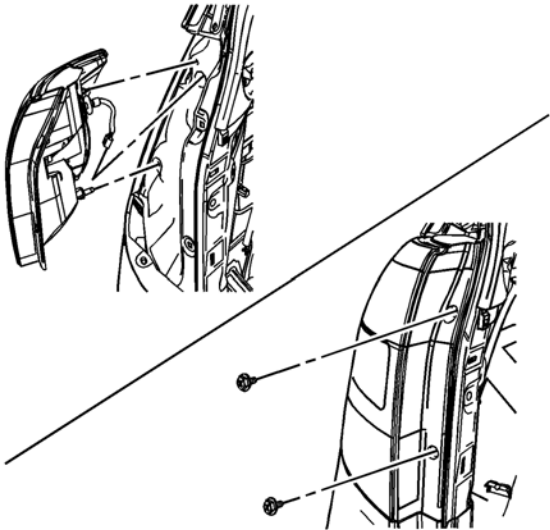

2. Disconnect the electrical connectors.
3. Remove the nuts and the lamp assembly.
4. Remove any inoperative bulb.

Installation Procedure

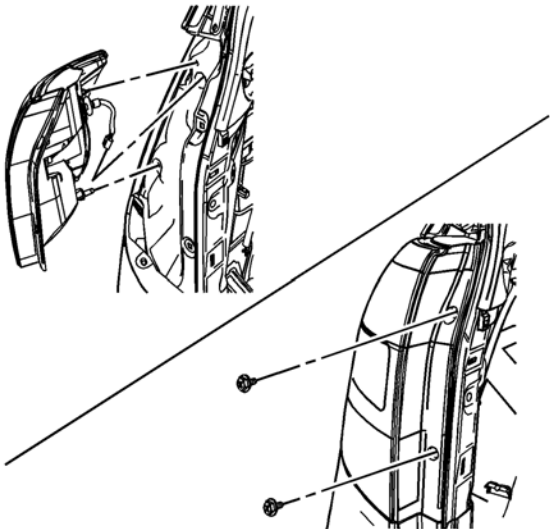

1. Install the replacement bulbs.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

2. Install the lamp assembly with the nuts.

Tighten

Tighten the rear combination lamp assembly nuts to 2.5 N·m (22 lb in).

3. Connect the electrical connectors.
4. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .