



Liftgate Window Replacement

Removal Procedure

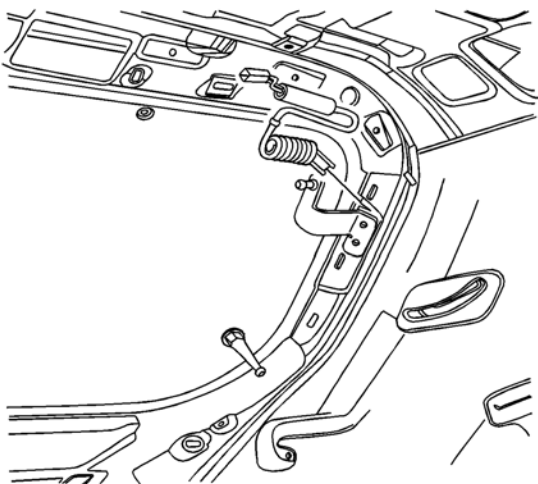


1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
2. Open the liftgate.
3. Disconnect the rear window defogger electrical connector.

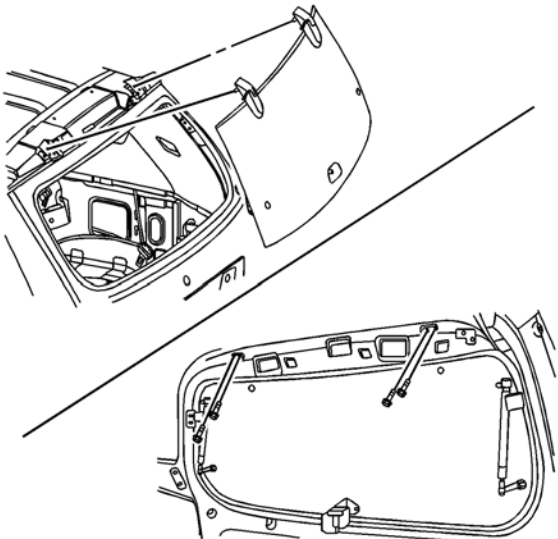

4. Remove the liftgate upper garnish molding. Refer to [Liftgate Garnish Molding Replacement](#) .
5. Remove the liftgate window strut. Refer to [Liftgate Window Replacement](#) .
6. With the aid of an assistant, remove the bolts and liftgate glass from the vehicle.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

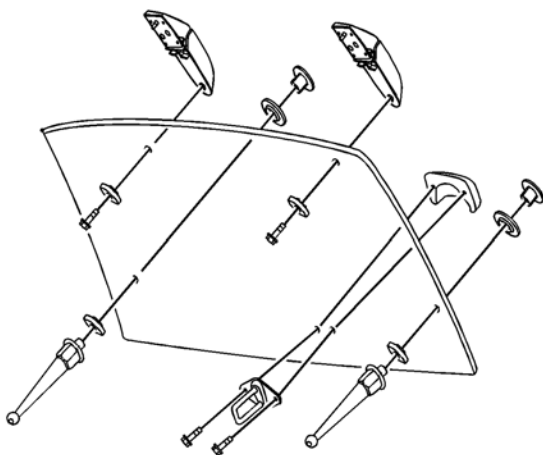

1. Install the liftgate glass with the bolts.

Tighten

Tighten the liftgate glass bolts to 6 N·m (53 lb in).