


Door Striker Replacement


Removal Procedure

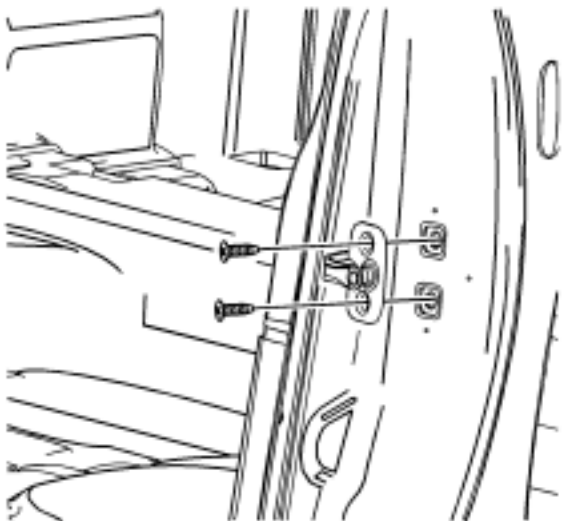

1. Open the door.
2. Remove the screws and the door striker. Front door shown, rear door similar.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.

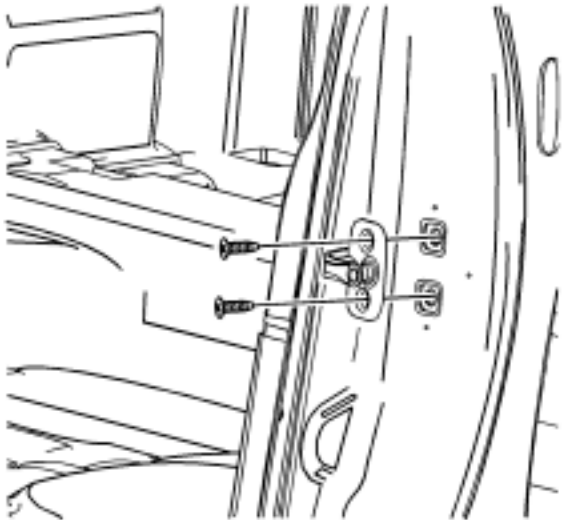

1. Install the screws and the door striker.

Tighten
Tighten the door striker screws to 24 N·m (18 lb ft).

2. Close the door.