


# Driver Information Display Bezel Replacement

## Removal Procedure


1. Remove the instrument panel center trim bezel. Refer to [Instrument Panel Accessory Bezel Replacement](#) .

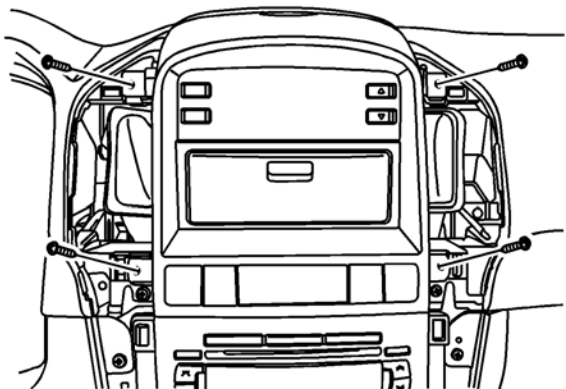

2. Remove the screws and the driver information bezel.

## Installation Procedure

**Notice:** Refer to [Fastener Notice](#) in Cautions and Notices.

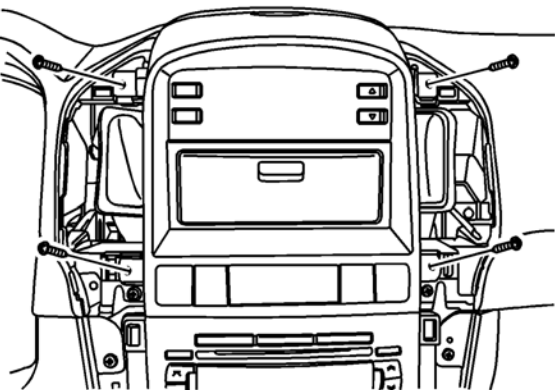

1. Install the driver information bezel with the screws.

**Tighten**  
Tighten the driver information bezel screws to 2 N·m (18 lb in).

2. Install the instrument panel center trim bezel. Refer to [Instrument Panel Accessory Bezel Replacement](#) .