


Muffler Replacement (2.0L Diesel)


Removal Procedure

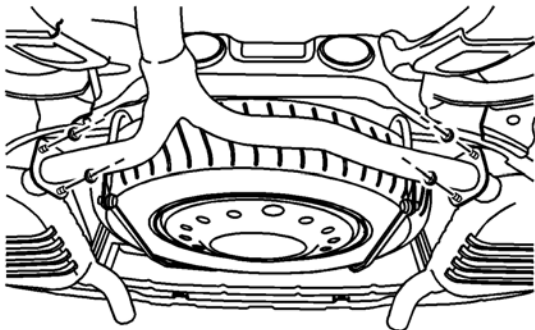

Caution: In order to avoid being burned, do not service the exhaust system while it is still hot. Service the system when it is cool.


Notice: When inspecting or replacing exhaust system components, make sure there is adequate clearance from all points on the underbody to prevent overheating of the floor pan and possible damage to the passenger compartment insulation and trim materials.

1. Remove the nuts and the gaskets from the both rear muffler pipe flange-to-front muffler pipe flange.

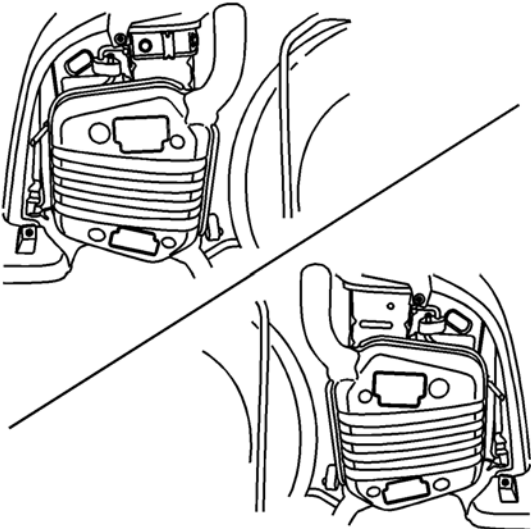

2. Detach the both rear muffler assembly from the rubber hangers.
3. Remove the both rear muffler.
4. Check the rear muffler and the pipe for holes, damage, open seams and other deterioration which could permit exhaust fumes to seep into the passenger compartment or the trunk.

Installation Procedure

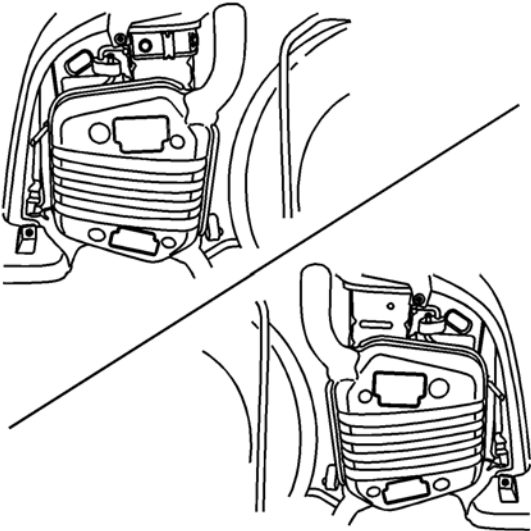

1. Secure the both rear muffler assembly to the rubber hangers.

Notice: Refer to [Fastener Notice](#) in Cautions and Notices.