



# Rear Window Wiper Motor Replacement

## Removal Procedure

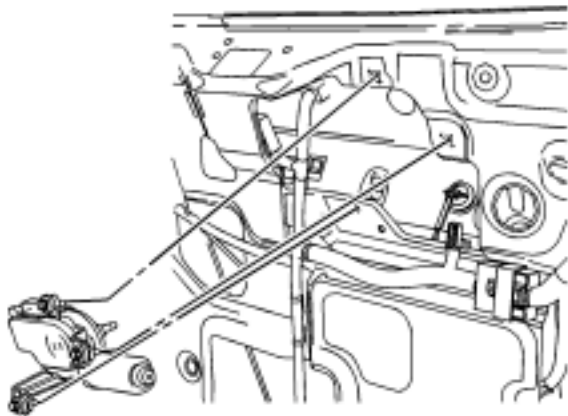

1. Remove the rear wiper arm. Refer to [Rear Window Wiper Arm Replacement](#) .
2. Remove the liftgate lower trim. Refer to [Liftgate Trim Panel Replacement](#) .
3. Remove the rear wiper motor bolts.
4. Remove the motor By sliding the pivot shaft out of the rear window grommet.
5. Disconnect the electrical connector.

## Installation Procedure

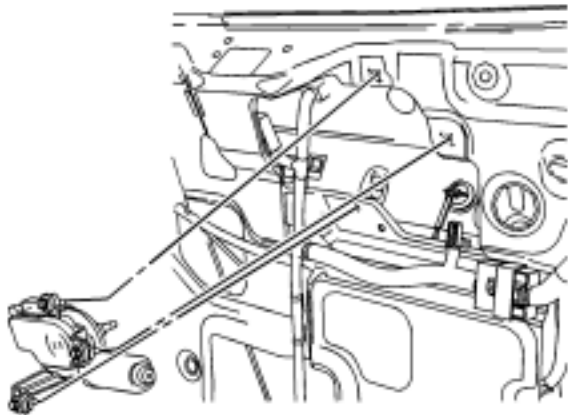

1. Connect the electrical connector.
2. Install the rear wiper motor through the rear window grommet.

**Notice:** Refer to [Fastener Notice](#) in Cautions and Notices.

3. Install the wiper motor bolts.

### Tighten

Tighten the bolts to 8 N·m (11 lb ft).

4. Install the liftgate trim panel. Refer to [Liftgate Trim Panel Replacement](#) .
5. Install the rear wiper arm. Refer to [Rear Window Wiper Arm Replacement](#) .