


1. Install the floor carpet.
2. Install the floor carpet retaining clips.

Notice: Refer to [Fastener Notice](#) in the Preface section.

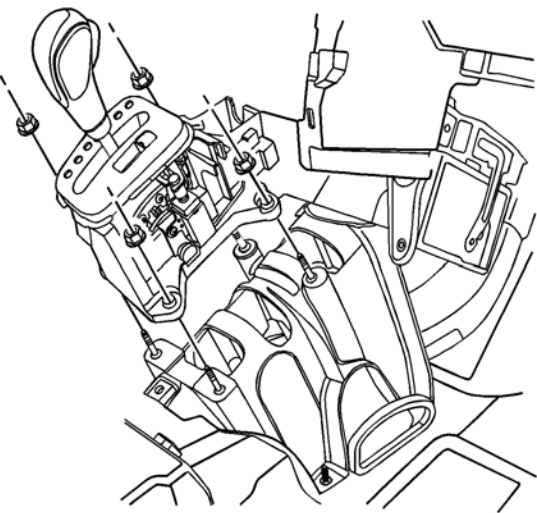


3. Install the gearshift housing with the bolts.

Tighten

Tighten the gearshift housing bolts to 8 N·m (70 lb in).

4. Install the floor console. Refer to [Console Replacement](#) .
5. Install the front seats. Refer to [Bucket Seat Replacement](#) .
6. Remove the left and the right center pillar lower garnish molding. Refer to [Center Pillar Lower Garnish Molding Replacement](#) .
7. Install the left and the right front door sill plates. Refer to [Front Side Door Sill Plate Replacement](#) .

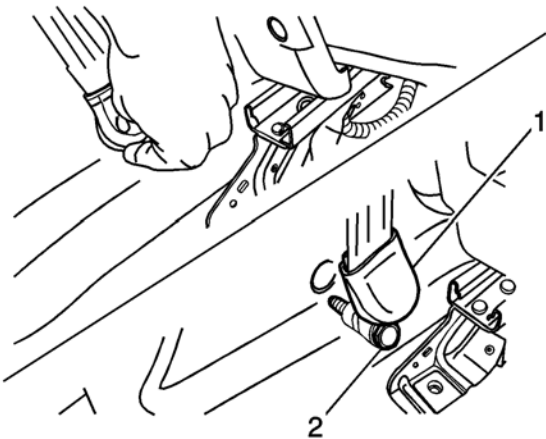

8. Install the left and the right lower front seat belt anchors (1) to the center pillar garnish molding with the bolts (2).

Tighten

Tighten the seat belt anchor bolts to 38 N·m (28 lb ft).

9. Install the left and the right rear door sill plates. Refer to [Rear Side Door Sill Plate Replacement](#) .
10. Install the rear seat . Refer to [Rear Seat Replacement](#) and [Rear Number 2 Folding Seat Replacement](#) .
11. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .