


# Dome Lamp Replacement

## Removal Procedure


**Caution:** Refer to [Battery Disconnect Caution](#) in Cautions and Notices.

1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .

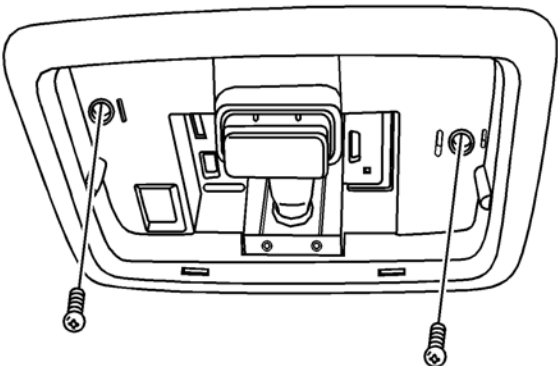

2. Pry off the dome lamp lens by inserting a screwdriver into the recess along the edge of the lens.
3. Remove the screws and the dome lamp housing from the headliner.
4. Disconnect the electrical connector.
5. Remove the bulb.

## Installation Procedure

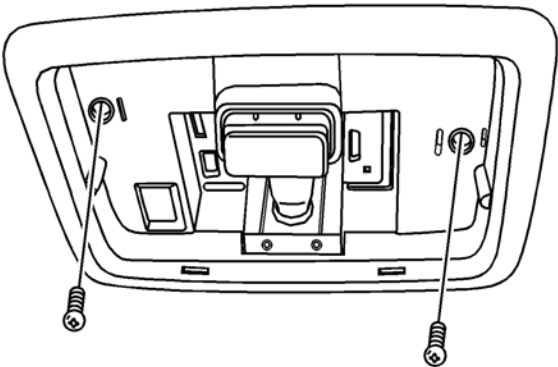

1. Install the replacement bulb.
2. Connect the electrical connector.

**Notice:** Refer to [Fastener Notice](#) in Cautions and Notices.

3. Install the dome lamp housing to the headliner with the screws.

### Tighten

Tighten the dome lamp housing screw to 2 N·m (18 lb in).

4. Press the dome lamp lens onto the housing.
5. Connect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#)