


# Headlamp Replacement


## Removal Procedure

**Caution:** Refer to [Battery Disconnect Caution](#) in Cautions and Notices.


1. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#) .
2. Remove the radiator grille upper cover.

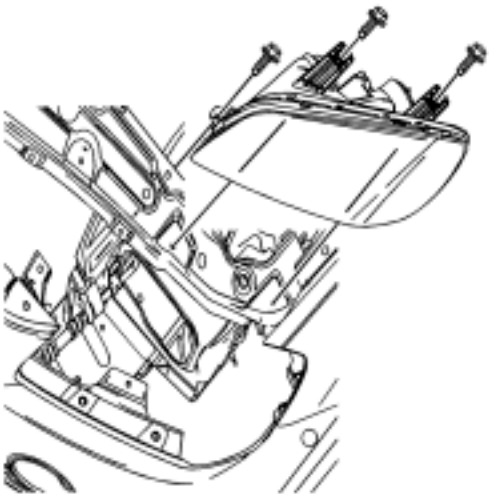

3. Remove the bolts and the headlamp assembly.

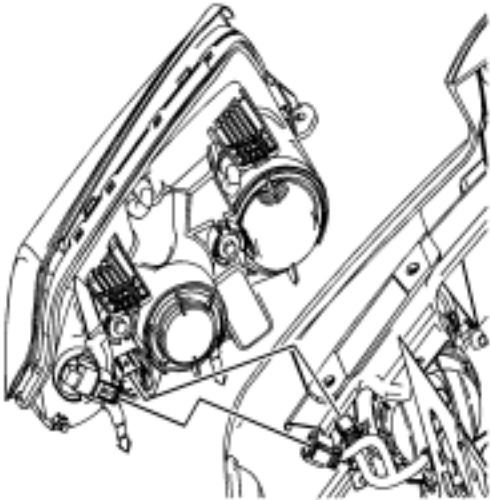

4. Disconnect the headlamp assembly electrical connectors.

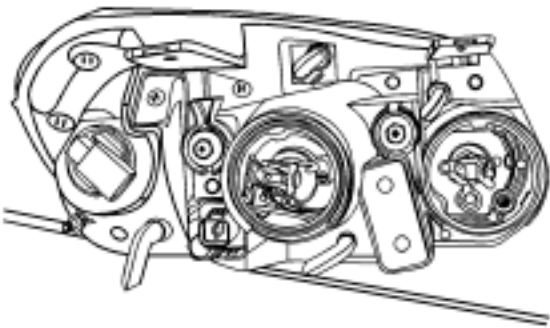

5. Remove the cap that conceals the headlamp bulb.
6. Disconnect the headlamp bulb electrical connectors.
7. Remove the headlamp bulbs.

## Installation Procedure