


Front Seat Belt Anchor Plate Tensioner Replacement

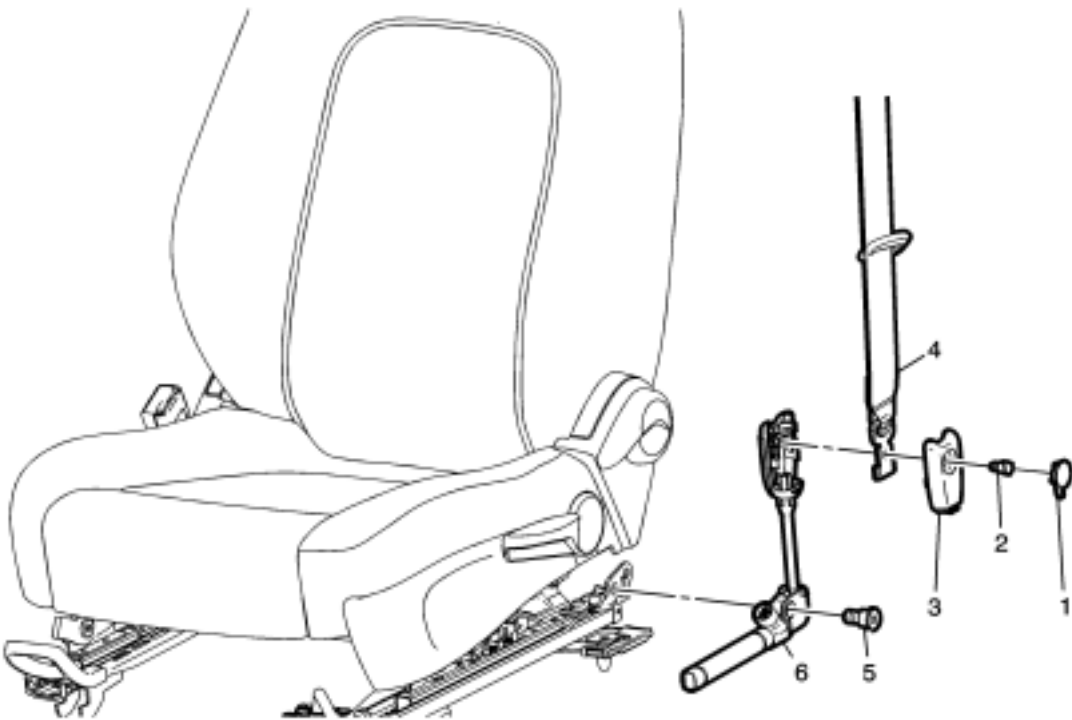

Callout	Component Name
<p>Warning: Refer to SIR Warning .</p> <p>Warning: In order to prevent accidental deployment and the risk of personal injury, do not dispose of an undeployed inflatable restraint seat belt pretensioner as normal shop waste. Undeployed seat belt pretensioners contain substances that could cause severe illness or personal injury if their sealed containers are damaged during disposal. Use the following deployment procedures to safely dispose of an undeployed seat belt pretensioner. Failure to observe the following disposal methods may be a violation of federal, state, or local laws.</p> <p>Preliminary Procedures</p> <p>1. Move the front seat to the full forward and full up position.</p> <p>2. Disable the SIR. Refer to SIR Disabling and Enabling .</p> <p>3. Remove the driver or passenger seat belt tensioner cover. Refer to Front Seat Belt Anchor Plate Tensioner Cover Replacement .</p> <p>4. For pretensioner handling and scrapping. Refer to Pretensioner Handling and Scrapping .</p>	
1	Driver or Passenger Seat Belt Tensioner Cover
2	Driver or Passenger Seat Belt Tensioner Cover Fastener Caution: Refer to Fastener Caution Tighten 7.5 N·m (66 lbin)
3	Driver or Passenger Seat Belt Tensioner Cover
4	Driver or Passenger Seat Belt Tensioner Seat Belt Latch