

Drive Belt Replacement


Special Tools

EN 6349 Locking Pin


For equivalent regional tools, refer to [Special Tools](#) .

Removal Procedure

1. Remove the power steering pump belt, if equipped. Refer to [Power Steering Pump Belt Replacement](#) .
2. Remove the front wheelhouse liner inner front extension. Refer to [Front Wheelhouse Liner Inner Front Extension Replacement](#) .

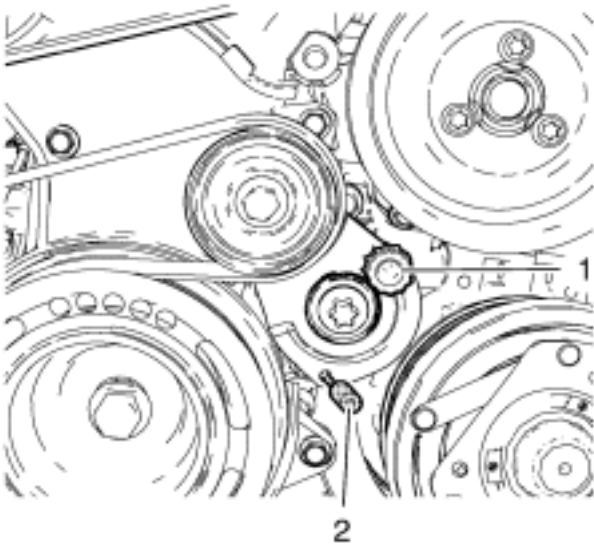

3. Release tension to the drive belt tensioner by rotating counterclockwise (1) and lock with *EN 6349* pin (2).

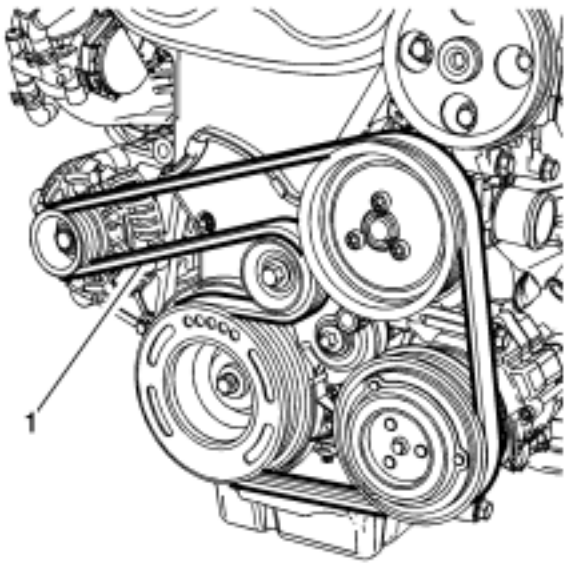

4. Remove the drive belt (1).