


Headlamp Replacement

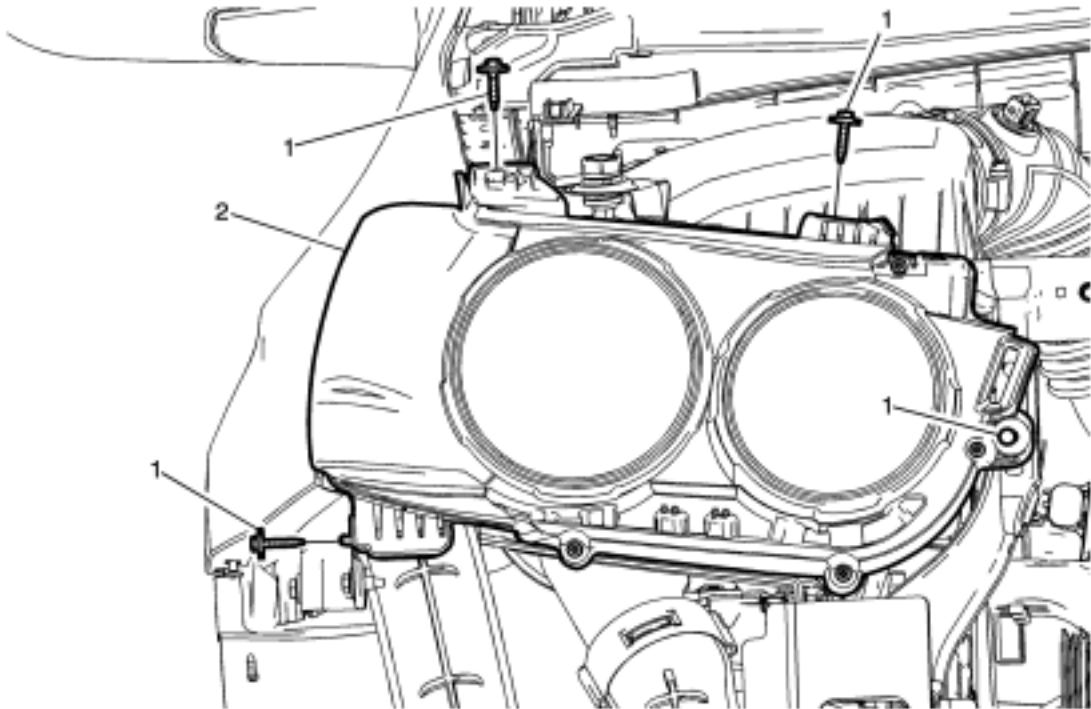

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the front bumper fascia. Refer to Front Bumper Fascia Replacement .</p>	
1	<p>Headlamp Assembly Screw (Qty: 4)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 2.5 N·m (22 lb in)</p>
2	<p>Headlamp Assembly</p> <p>Procedure</p> <p>1. Disconnect the electrical connector bulb harness and remove the headlamp assembly. 2. Aim the headlamps after replacement. Refer to Headlamp Aiming .</p>