

## Heater Inlet Hose Replacement (1.6L or 1.8L)


### Special Tools

*BO-38185* Hose Clamp Pliers


For equivalent regional tools, refer to [Special Tools](#) .

### Removal Procedure

1. Drain the cooling system. Refer to [Cooling System Draining and Filling](#) .

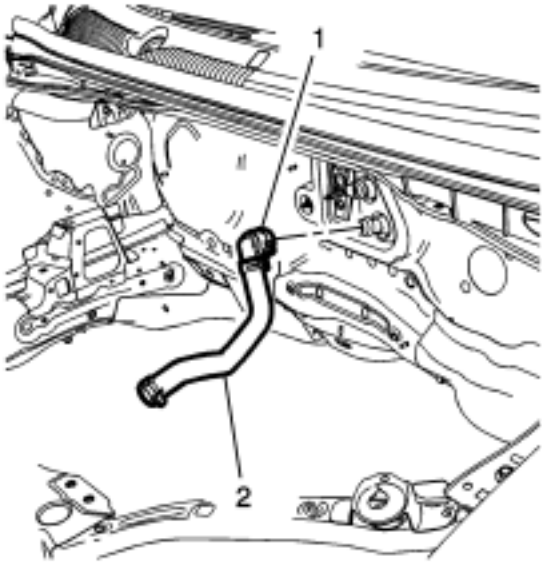

2. Disengage the heater inlet hose quick connect clip (1) at the heater core.
3. Remove the heater inlet hose (2) from the heater core.

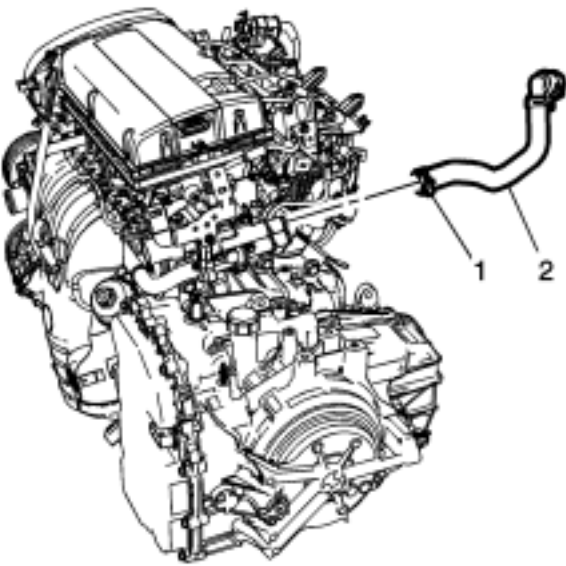

4. Remove the heater inlet hose clamp (1) at the engine using *BO-38185* Hose Clamp Pliers .
5. Remove the heater inlet hose (2) from the engine.
6. Remove the heater inlet hose from the vehicle.