


Automatic Transmission Control Indicator Opening Cover Replacement

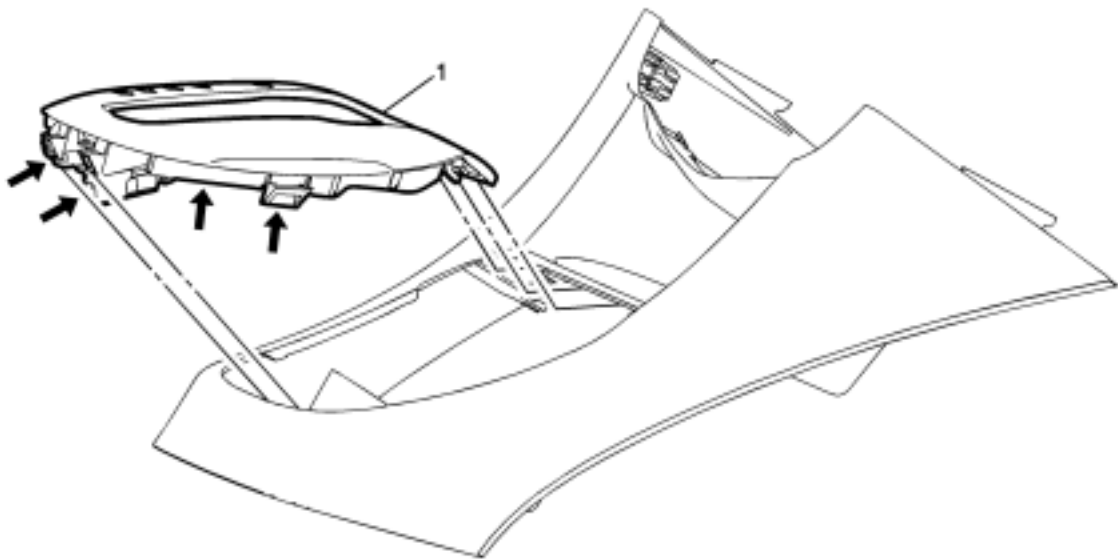

Callout	Component Name
<p><b>Preliminary Procedure</b></p> <p>Remove the front floor console cover. Refer to <a href="#">Front Floor Console Cover Replacement</a> .</p>	
1	<p>Automatic Transmission Control Indicator Opening Cover Assembly</p> <p><b>Procedure</b></p> <p>Release the retainer clips securing the transmission control indicator to the front floor console cover.</p>