


Turn Signal Switch Bracket Replacement

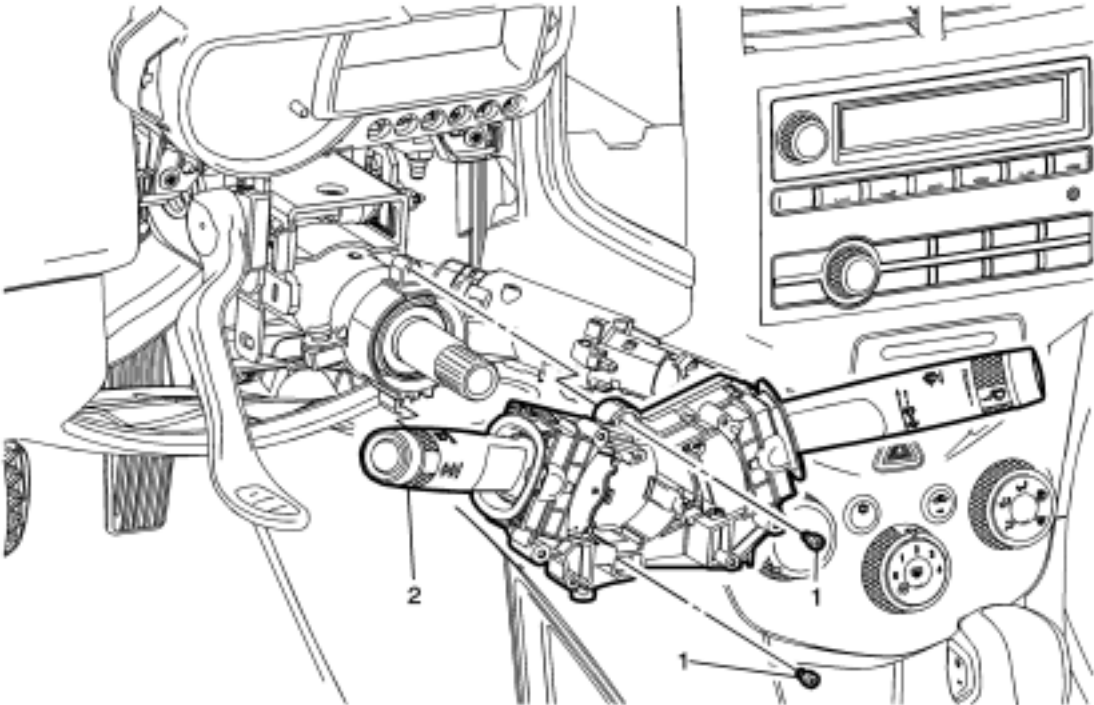

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the inflatable restraint steering wheel module coil. Refer to Steering Wheel Airbag Coil Replacement .</p>	
1	<p>Turn Signal Switch Bracket Fastener (Qty: 2)</p> <p>Caution: Refer to Fastener Caution .</p>
2	<p>Turn Signal Switch Bracket</p> <p>Procedure</p> <p>1. Disconnect any electrical connectors as necessary.</p> <p>2. Release the locking tab in order to disconnect the turn signal switch bracket from the steering column.</p> <p>3. Transfer components as necessary.</p>