


Liftgate Hinge Replacement

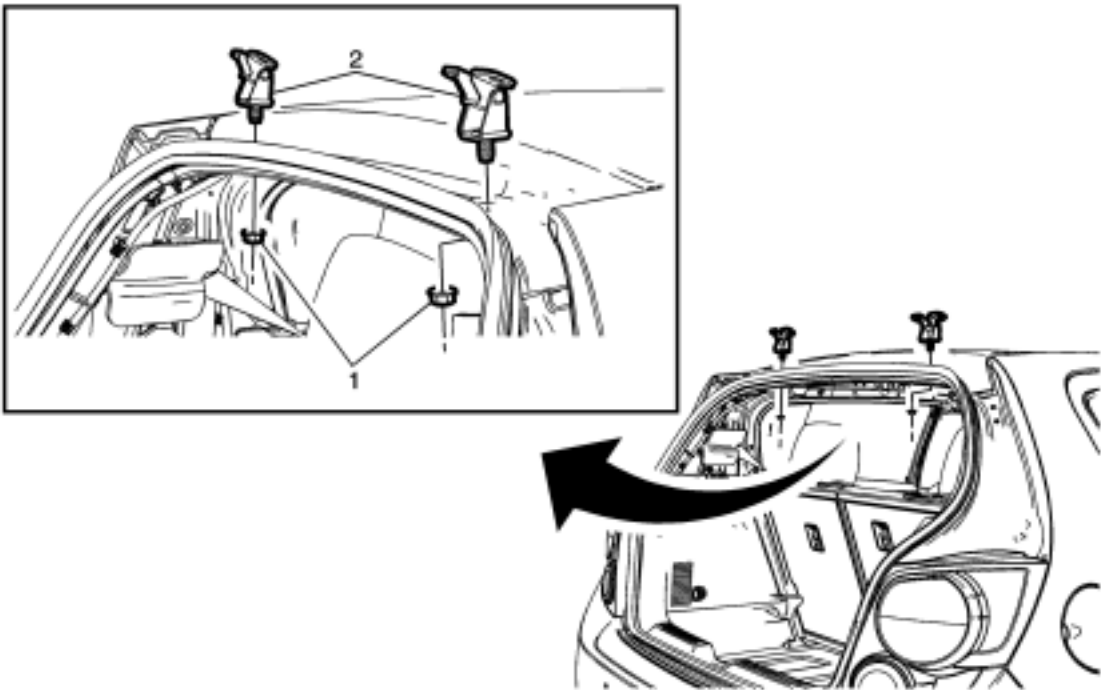

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Remove the liftgate. Refer to Liftgate Replacement .</p> <p>2. Lower the rear of the headliner to access the inner bolts. Refer to Headlining Trim Panel Replacement .</p> <p>3. Use a grease pencil to mark the liftgate hinge position to the body prior to removal.</p>	
1	<p>Liftgate Hinge Nut (Qty: 2)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 40N·m (30lbft)</p>
2	<p>Liftgate Hinge (Qty: 2)</p> <p>Procedure</p> <p>Adjust the liftgate if needed.</p>