


Front End Inflatable Restraint Discriminating Sensor Replacement

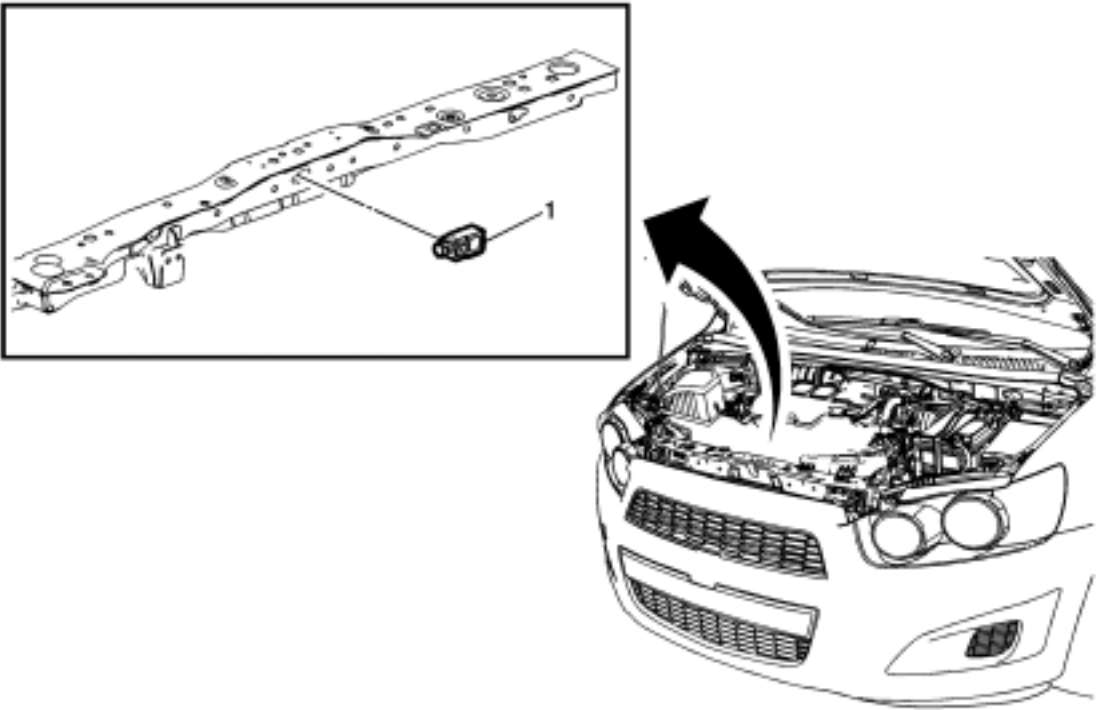

Callout	Component Name
<p><b>Warning:</b> Refer to <a href="#">SIR Warning</a> .</p> <p><b>Warning:</b> Refer to <a href="#">SIR Inflator Module Handling and Storage Warning</a> .</p> <p><b>Warning:</b> Following the deployment of a side impact air bag, inspect the following parts for damage. Replace these parts if necessary:</p> <ul style="list-style-type: none"><li>• The seat cushion frame</li><li>• The seat recliner, if equipped</li><li>• The seat adjuster</li><li>• The seat back frame</li></ul> <p>Failure to do so may cause future personal injury.</p> <p><b>Preliminary Procedures</b></p> <ol style="list-style-type: none"><li>1. Disable the supplemental inflatable restraint (SIR) system. Refer to <a href="#">SIR Disabling and Enabling</a> .</li><li>2. Remove the radiator opening upper cover. Refer to <a href="#">Radiator Opening Upper Cover Replacement</a> .</li></ol>	
1	<p>Inflatable Restraint Front End Discriminating Sensor Assembly</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> .</p> <p><b>Procedure</b></p> <ol style="list-style-type: none"><li>1. Disconnect electrical connector.</li><li>2. Loosen the bolts and slide the sensor out of the keyhole slots.</li><li>3. The bolts are integral to the sensor assembly and DO NOT remove separately.</li></ol> <p><b>Tighten</b> 7.5 N·m (66 lb in)</p>