



Strut, Strut Component, or Spring Replacement

Disassembly Procedure


1. Remove the front suspension strut from the vehicle. Refer to [Strut Assembly Removal and Installation](#) .

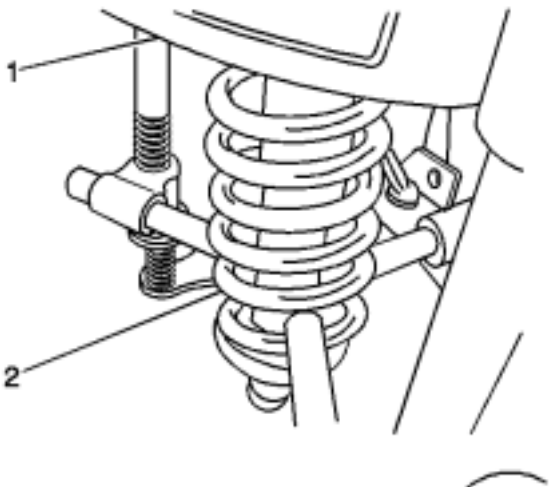

2. Install the front suspension strut (2) in the spring compressor (1).
Note: The spring is compressed when the strut moves freely.
3. Using the spring compressor (1), compress the front spring.

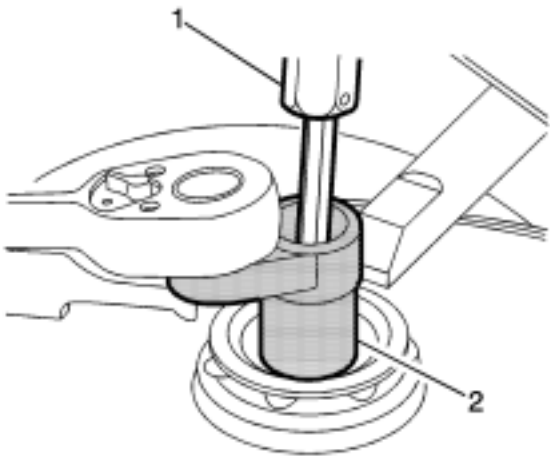

4. Using a TORX® bit (1) and the appropriate socket (2), loosen the front suspension strut nut.

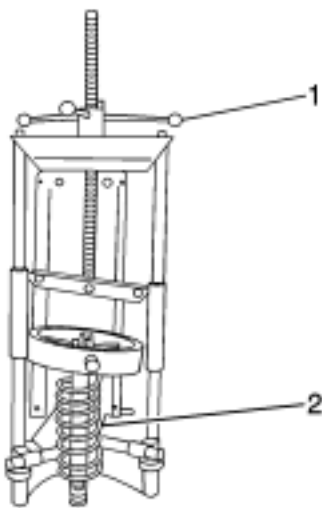

5. Slowly loosen the spring compressor (2) to remove the front suspension strut components to be serviced.