


Rear Door Lock Cylinder Replacement

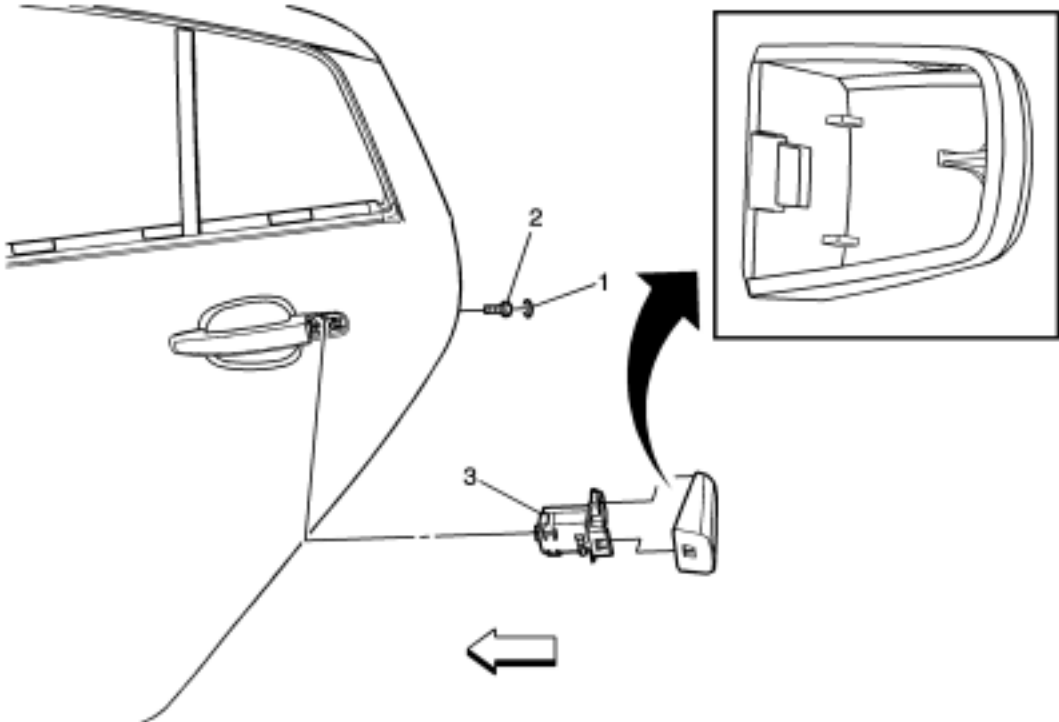

Callout	Component Name
1	<div>Rear Side Door Lock Cylinder Opening Cover Screw Access Plug</div> <div>Tip Use a flat-bladed tool to remove the cover.</div>
2	<div>Rear Side Door Lock Cylinder Clamp Screw</div> <div>Caution: Refer to Fastener Caution .</div> <div>Procedure Do Not remove the cylinder screw completely from the housing. unscrew the screw to a hard stop, remove the cylinder.</div> <div>Tighten 5 N·m (44 lbin)</div>
3	<div>Rear Side Door Lock Cylinder</div> <div>Procedure Remove the lock cylinder cover. Refer to Rear Side Door Lock Cylinder Opening Cover Replacement .</div>