


Windshield Wiper Arm Replacement

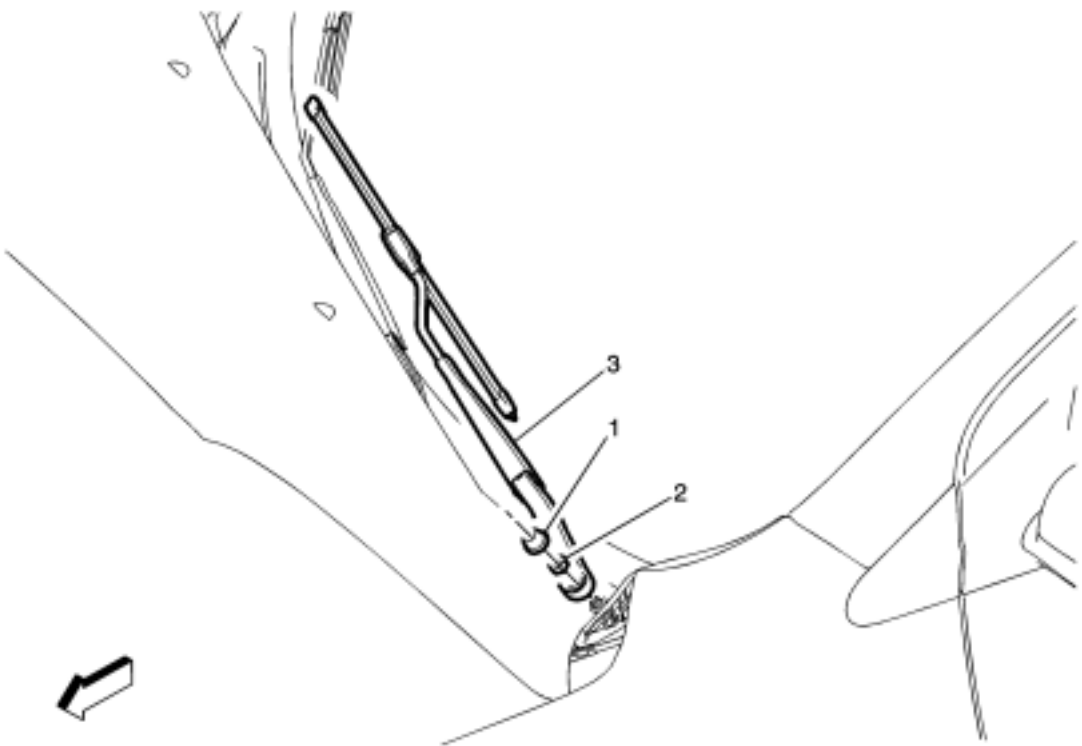

Callout	Component Name
<p>Preliminary Procedure</p> <p>Open and support the hood assembly.</p>	
1	<p>Windshield Wiper Arm Nut Cap</p> <p>Tip Use a small flat-bladed tool in order to release the finish cap from the wiper arm assembly.</p>
2	<p>Windshield Wiper Arm Nut</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 25 N·m(18 lbft)</p>
3	<p>Windshield Wiper Arm</p> <p>Procedure</p> <p>1. Use the <i>BO-49385</i> puller in order to assist in the removal of the wiper arm from the wiper module pivot shaft.</p> <p>2. Remove the wiper arm from the pivot shaft.</p> <p>3. Clean the pivot shaft knurls with a soft wire brush before installing a new wiper arm.</p> <p>Special Tools</p> <p><i>BO-49385</i> Wiper Arm Puller</p> <p>For equivalent regional tools, refer to Special Tools .</p>