


Rear Window Wiper Arm Replacement

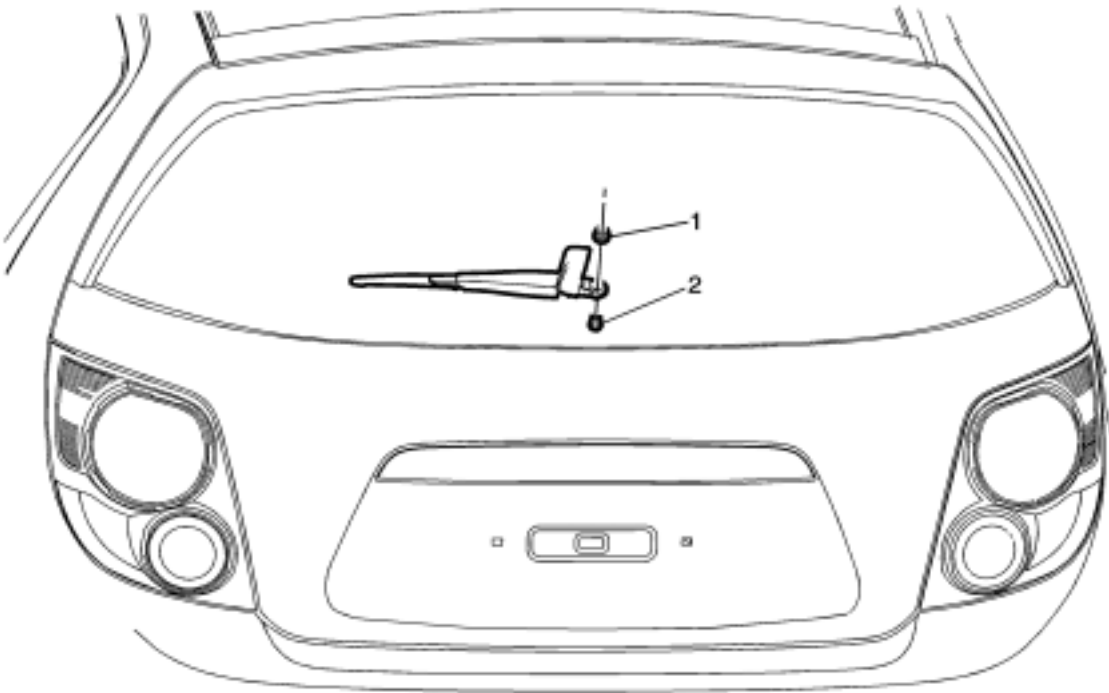

Callout	Component Name
<p>Preliminary Procedure</p> <p>Using a small flat-bladed tool, release the locking tabs and lift the end of the wiper arm nut cover in order to access and remove the rear wiper arm nut.</p>	
1	<p>Rear Window Wiper Arm Nut</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 10N·m (89lbin)</p>
2	<p>Rear Window Wiper Arm</p> <p>Tip Align and hold the rear window wiper arm blade to the edge of the blackout on the rear liftgate window while tightening.</p>