

Heater Inlet Hose Replacement (1.2L or 1.4L)


Special Tools

BO-38185 Hose Clamp Pliers


For equivalent regional tools, Refer to [Special Tools](#)

Removal Procedure

1. Drain the cooling system. Refer to [Cooling System Draining and Filling](#)

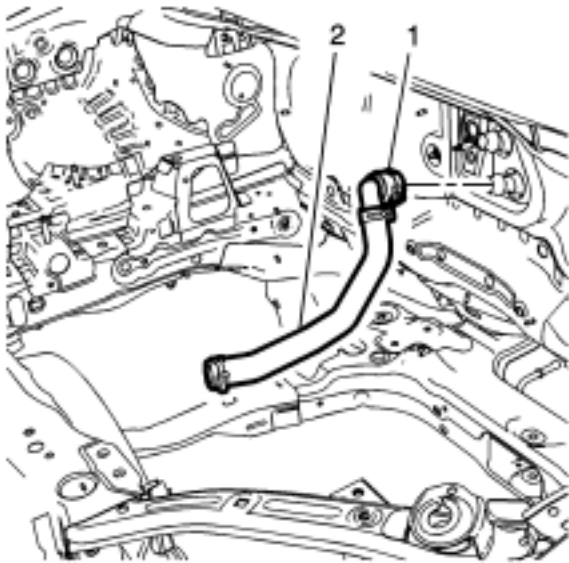

2. Disconnect the heater inlet hose quick connect fitting (1) at the heater core.
3. Remove the heater inlet hose (2) from the heater core.

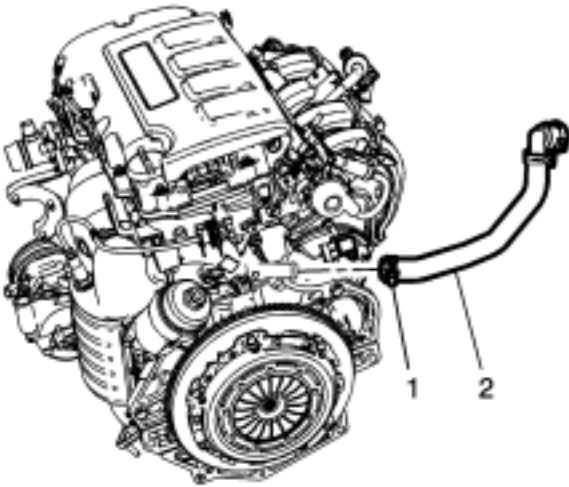

4. Remove the heater inlet hose clamp (1) at the engine using *BO-38185* Hose Clamp Pliers .
5. Remove the heater inlet hose (2) from the engine.
6. Remove the heater inlet hose from the vehicle.