


Inside Rearview Mirror Replacement

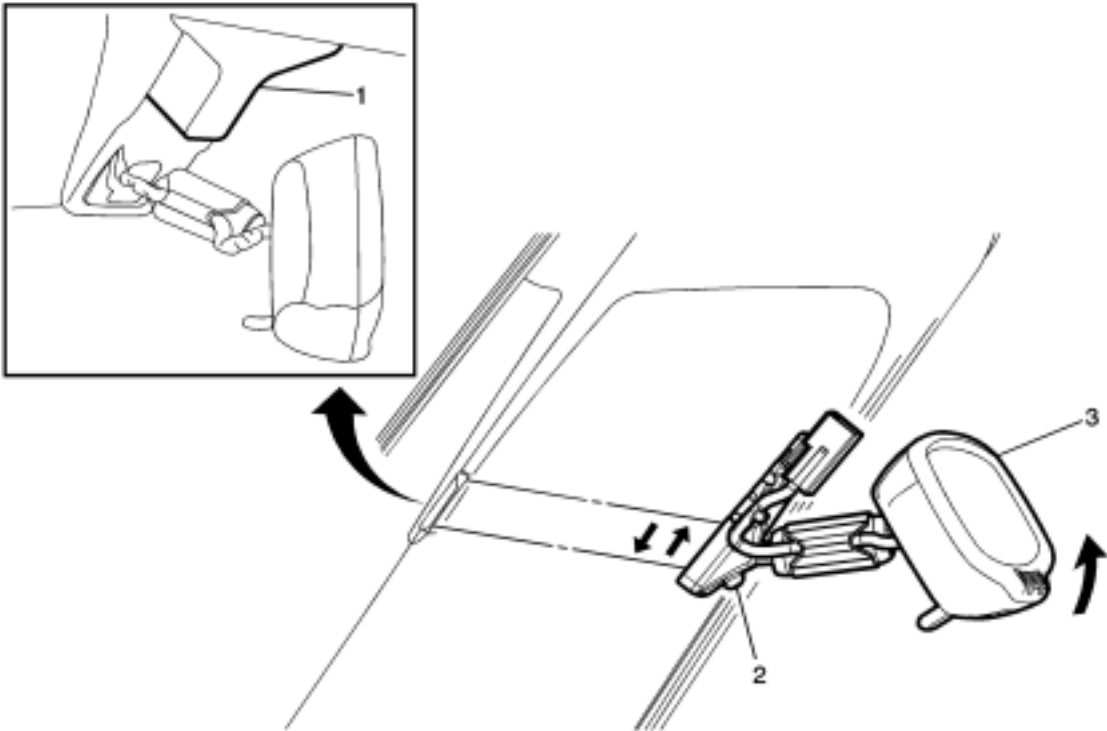

Callout	Component Name
1	<div>Inside Rearview Mirror Cover</div> <div><b>Procedure</b><div><div>1. Remove the wire harness cover, sliding the cover upward releasing the cover from the support.</div><div>2. Disconnected the connector from the mirror base.</div></div></div>
2	<div>Inside Rearview Mirror Screw</div> <div><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> .</div> <div><b>Procedure</b><div><div>1. Adjust the mirror to the full upward position, loosen the screw at the base in order to remove the mirror from the button.</div><div>2. Slide the mirror in an upward motion in order to remove.</div></div><div><b>Tighten</b> 2N·m (18lbin)</div></div>
3	<div>Inside Rearview Mirror</div>