


Windshield Wiper System Module Replacement

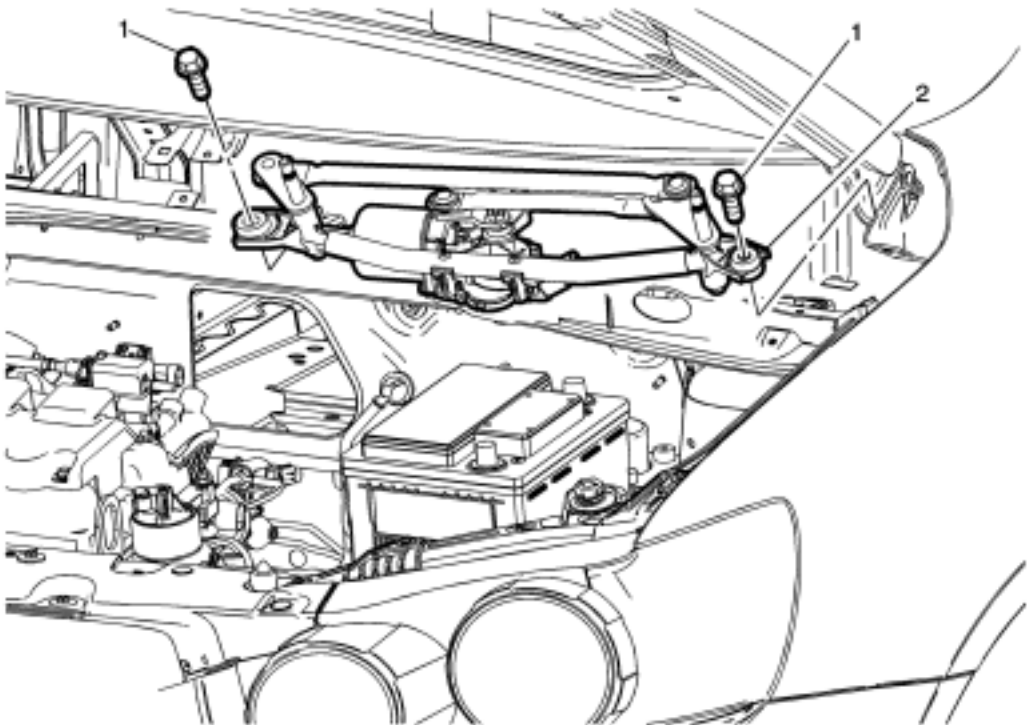

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Open and support the hood assembly.</p> <p>2. Remove the air inlet grille panel. Refer to Air Inlet Grille Panel Replacement .</p>	
1	<p>Windshield Wiper System Module Bolt (Qty: 2)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 18 N·m (13 lbft)</p>
2	<p>Windshield Wiper System Module</p> <p>Procedure</p> <p>1. Lift the wiper system module from the plenum brackets.</p> <p>2. Disconnect the electrical connector from the windshield wiper motor.</p> <p>3. Remove the windshield wiper system module from the plenum.</p>