


Rear Seat Back Cushion Hinge Replacement

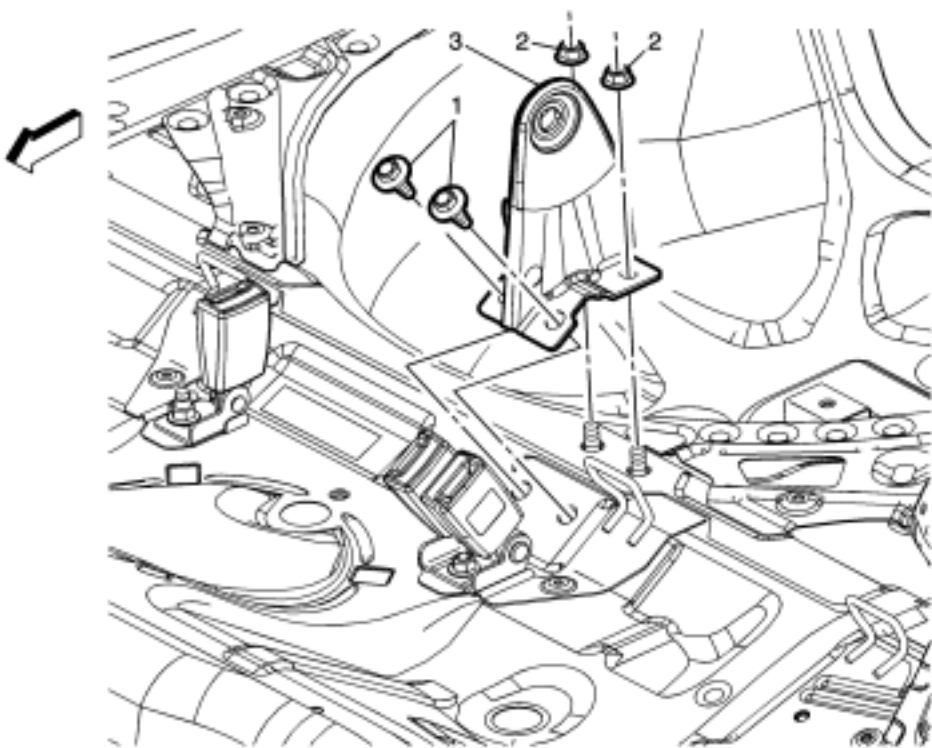

Callout	Component Name
<p>Preliminary Procedure</p> <p>1. Remove the rear seat cushion. Refer to Rear Seat Cushion Replacement</p> <p>2. Remove the rear seat back cushion. Refer to Rear Seat Back Cushion Replacement</p> <p>3. Remove the rear compartment floor panel carpet. Refer to Rear Compartment Floor Panel Carpet Replacement</p>	
1	<p>Rear Seat Back Cushion Hinge Bolt (Qty: 2)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 43 N·m (32 lb ft)</p>
2	<p>Rear Seat Back Cushion Hinge Nut (Qty: 2)</p> <p>Tighten 43 N·m (32 lb ft)</p>
3	<p>Rear Seat Back Cushion Hinge</p>