


Driver or Passenger Seat Replacement

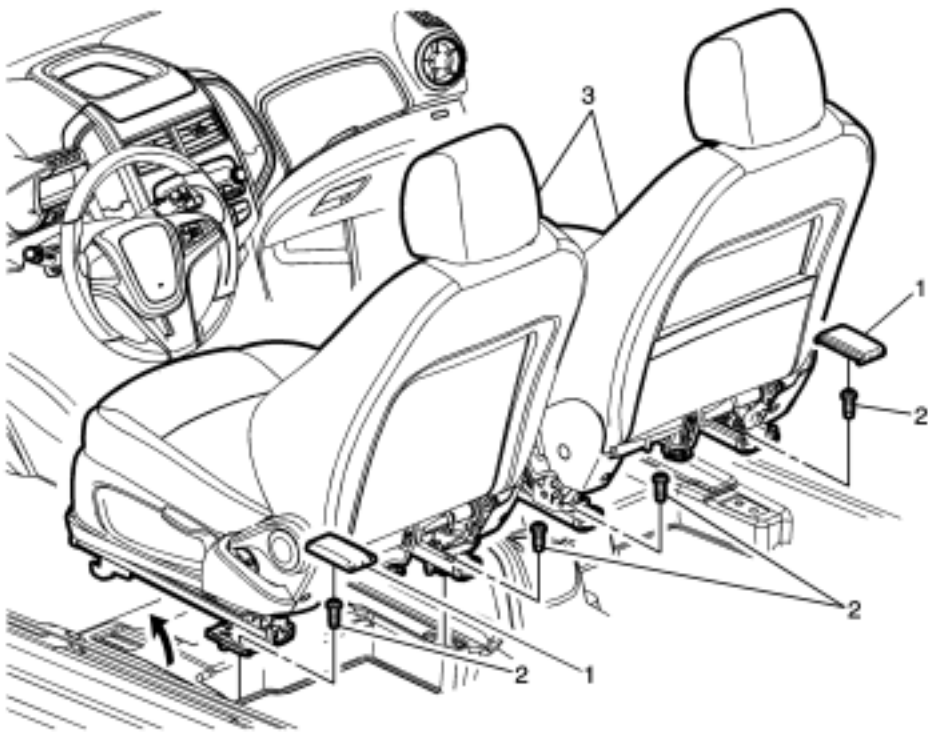

Callout	Component Name
<p><b>Warning:</b> Refer to <a href="#">SIR Warning</a> .</p> <p><b>Preliminary Procedures</b></p> <p>1. Disable the SIR system. Refer to <a href="#">SIR Disabling and Enabling</a> .</p> <p>2. Disconnect the front seat belt lower fastener. Refer to <a href="#">Driver or Passenger Seat Shoulder Belt Replacement</a> .</p> <p>3. Disable the front seat belt tensioner fastener by removing the cap, and cover, if equipped. Refer to <a href="#">SIR Disabling and Enabling</a> .</p>	
1	<p>Front Seat Riser Finish Cover (Qty: 2)</p> <p><b>Procedure</b></p> <p>Remove the front seat riser cover. Refer to <a href="#">Front Seat Riser Finish Cover Replacement</a> .</p>
2	<p>Front Seat Mounting Bolt (Qty: 4)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> .</p> <p><b>Procedure</b></p> <p>Adjust the seat to the full forward position to gain access to the rear bolts.</p> <p><b>Tighten</b> 40N·m (30lbft)</p>
3	<p>Driver or Passenger Seat Assembly (Qty: 2)</p> <p><b>Procedure</b></p> <p>1. Disconnect the electrical.</p> <p>2. With the aid of an assistant remove the front seat, by tilting the seat forward and then lifting and pulling the seat rearwards to disengage the front hooks.</p> <p>3. Transfer components as necessary.</p>