



10. Using the *CH35669* socket (2) and the proper size allen wrench, loosen the front strut nut.

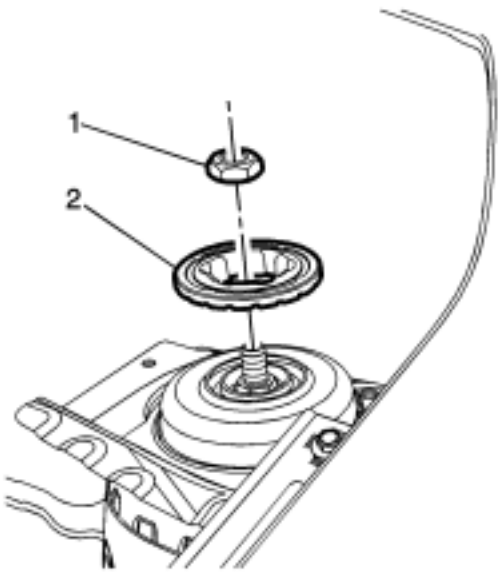

11. Remove the front strut nut (1) and the retaining plate (2). Discard the nut and replace with NEW only.

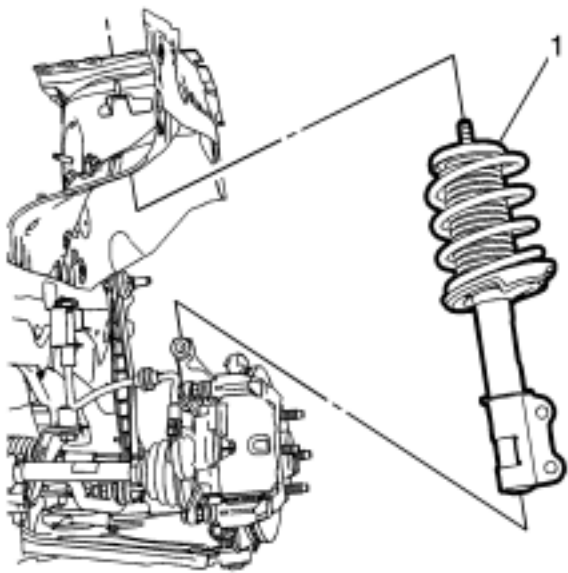

12. Remove the front strut assembly from the vehicle (1).
13. If removing the front strut assembly to service any of the front strut components, refer to [Strut, Strut Component, or Spring Replacement](#) .