



Inflatable Restraint Steering Wheel Module Coil Centering

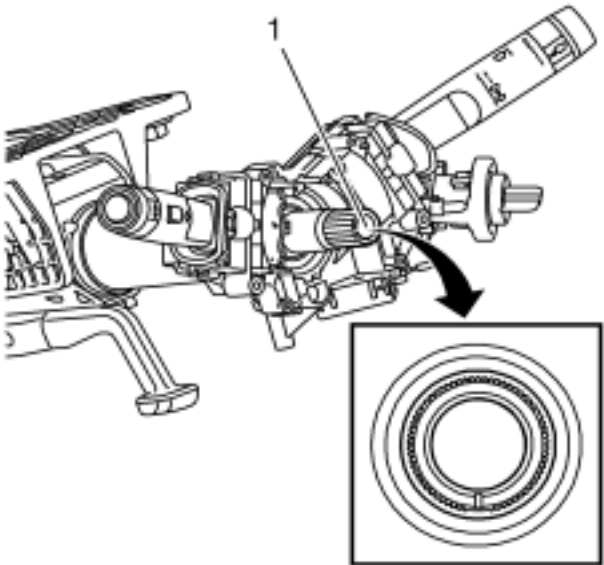

Caution: The new SIR coil assembly will be centered. Improper alignment of the SIR coil assembly may damage the unit, causing an inflatable restraint malfunction.

1. Verify the following conditions before centering the supplemental inflatable restraint (SIR) steering wheel module coil:
 - The wheels on the vehicle are straight ahead.
 - The centering mark (1) of the steering shaft is in the 6 o'clock position.
2. Turn the lobe of the coil clockwise until the coil ribbon stops. Do not force.
3. Turn the lobe of the coil counterclockwise approximately 3 turns to the neutral position.

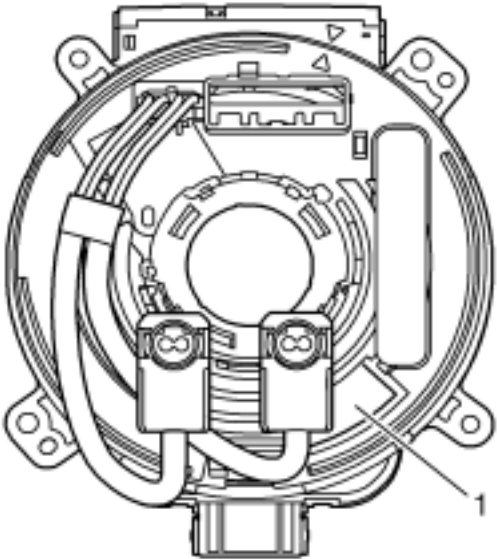

Note: The quantity of electrical connectors may vary depending upon the content of the vehicle.

4. Properly align the coil until the centering window turns yellow (1). This indicates the CENTER position of the coil.