


Parking and Turn Signal Lamp Bulb Replacement

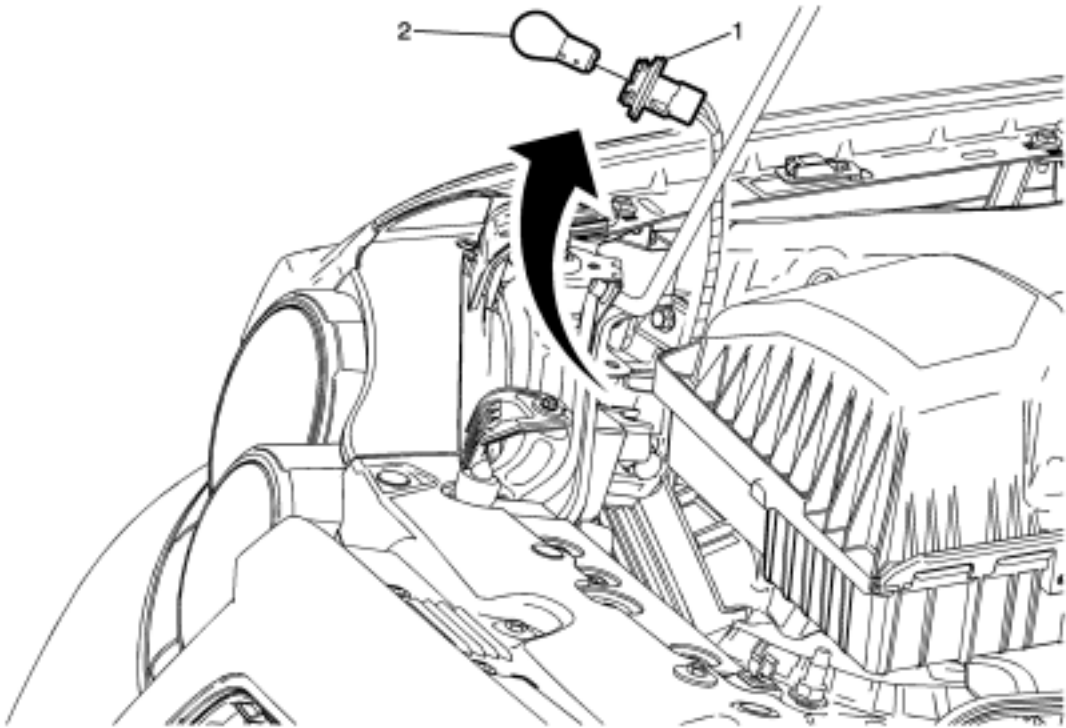

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Open and support the hood assembly. 2. Reposition the air cleaner inlet duct on the passenger side of the engine compartment. 3. Remove the low beam accessory bulb cover in order to access the front parking and turn signal lamp bulb socket.</p>	
1	<p>Parking and Turn Signal Lamp Bulb Socket</p> <p>Procedure</p> <p>Rotate the bulb socket counter-clockwise and remove from the headlamp housing.</p>
2	<p>Parking and Turn Signal Lamp Bulb</p> <p>Procedure</p> <p>Push inward and rotate the parking and turn signal bulb counter-clockwise in order to remove.</p>