


Windshield Washer Nozzle Hose Replacement

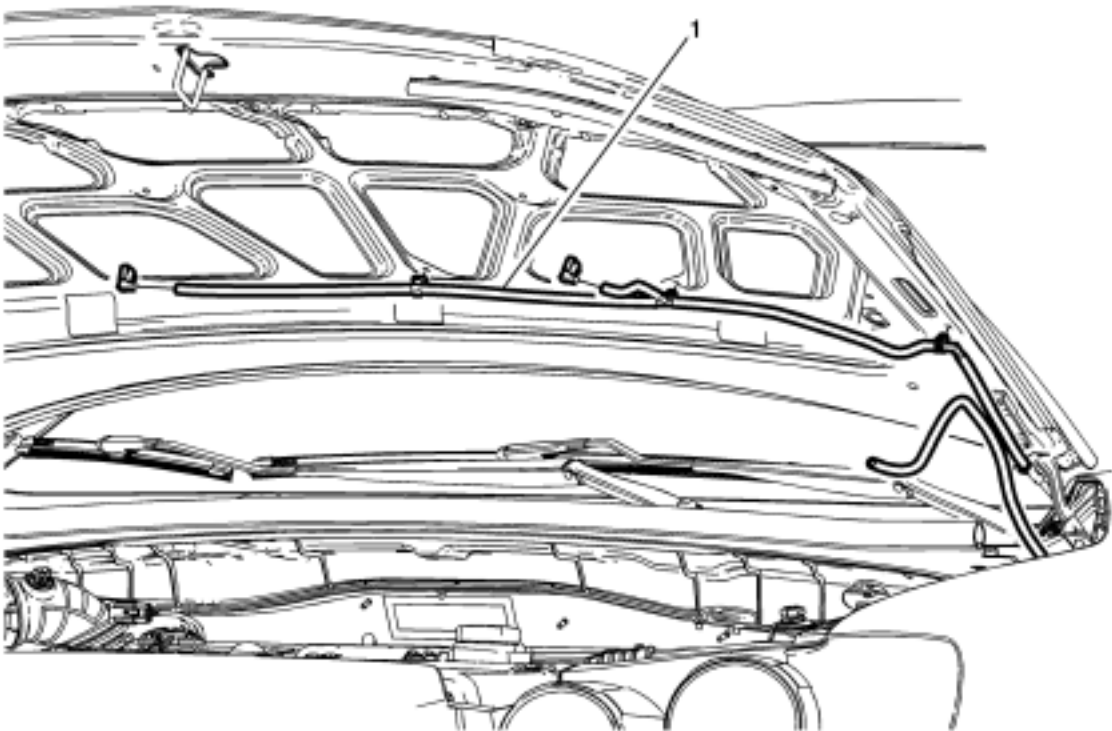

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the hood insulator. Refer to Hood Insulator Replacement .</p>	
1	<p>Windshield Washer Nozzle Hose</p> <p>Procedure</p> <p>1. Disconnect the windshield washer hose at the front fender upper left hand bracket from the windshield washer solvent container pump hose.</p> <p>2. Disconnect the windshield washer hose retainer at the hood hinge.</p> <p>3. Disconnect all three washer hose retainers from the underside of the hood assembly.</p> <p>4. Disconnect the windshield washer hose at both windshield washer nozzle spouts.</p> <p>5. Remove the windshield washer hose from the vehicle.</p>