


Rear Seat Back Cushion Replacement (AM7 Non Split Folding)

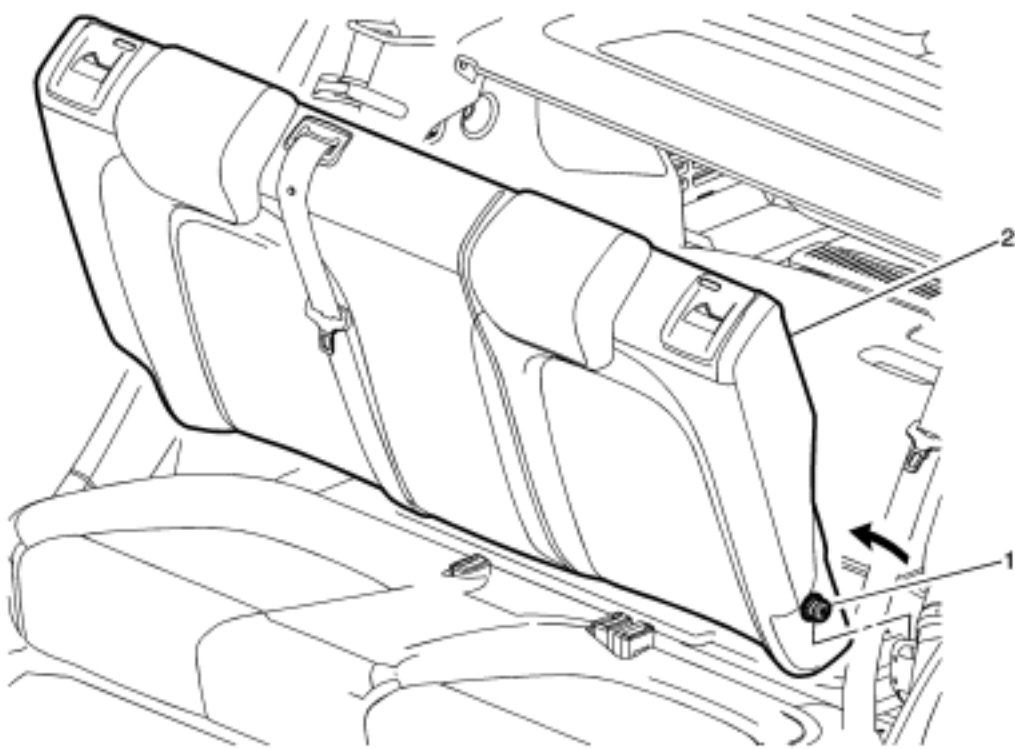

Callout	Component Name
1	<div>Rear Seat Back Cushion Pivot Support</div> <div>Procedure</div> <div><div>1. Remove the rear outboard shoulder belts from the shoulder belt bezel and position it out of the way, if equipped.</div><div>2. Remove the rear seat center seat belt nut from the rear floor, if equipped. Refer to <a href="#">Rear Seat Center Shoulder Belt Replacement</a></div><div>3. Pull the rear seat back cushion latch release located on the top of the rear seat back cushion, and fold the rear seat back cushion forward.</div><div>4. Push in on the rear seat back cushion pivot support, and release from bracket.</div></div>
2	<div>Rear Seat Back Cushion</div> <div>Procedure</div> <div><div>1. Pull up on the outer side of the rear seat back cushion and remove the rear seat back cushion from the bracket and hinge.</div><div>2. Transfer components as necessary.</div></div>