


Steering Angle Sensor Replacement

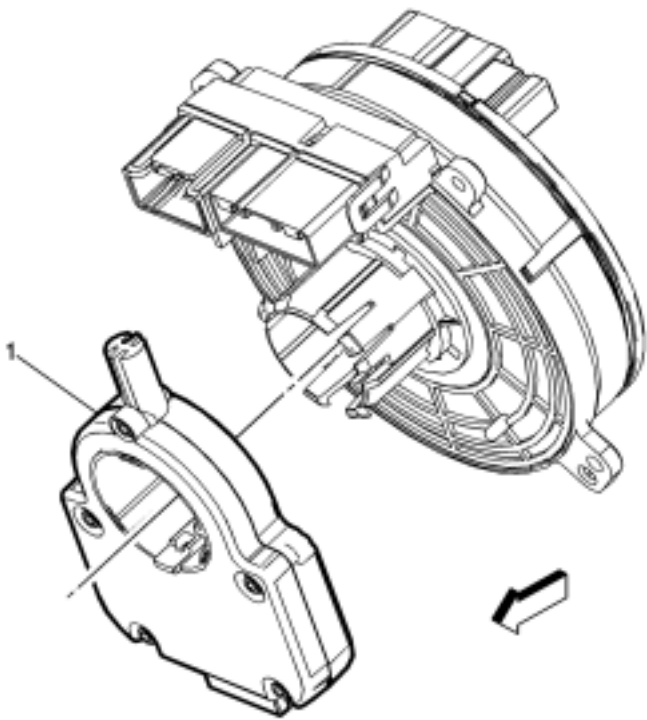

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the steering wheel airbag coil. Refer to Steering Wheel Airbag Coil Replacement .</p>	
1	<p>Steering Angle Sensor</p> <p>Procedure</p> <p>1. Press in the clip on the steering wheel airbag coil in order to remove the steering angle sensor.</p> <p>2. After the installation is complete, center the steering angle sensor. Refer to Steering Angle Sensor Centering .</p>