


SONIC

Battery Negative Cable Disconnection and Connection (LSF,LDV)

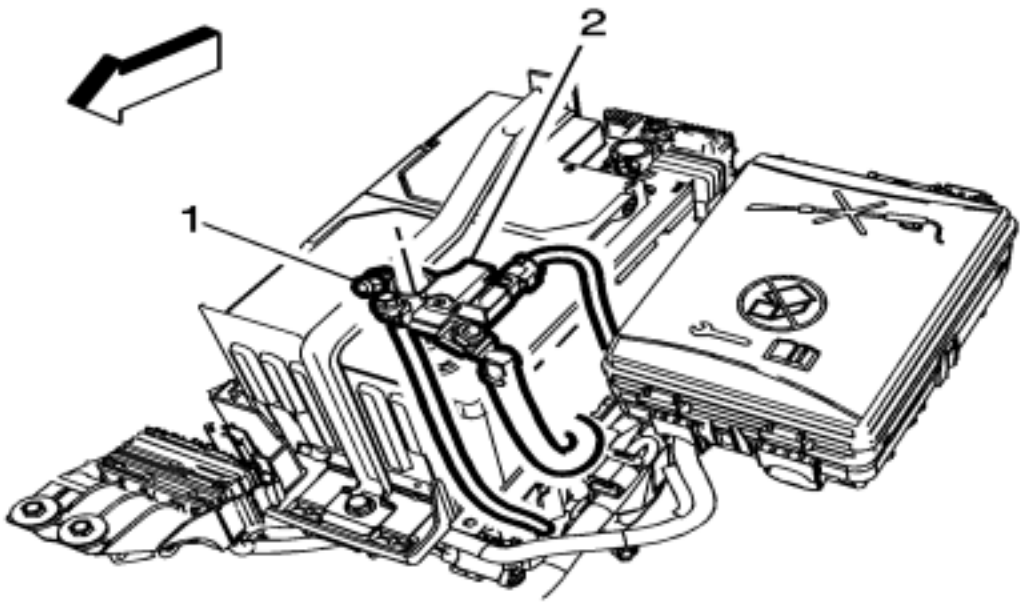

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Turn on the radio and record all of the radio pre-set stations.</p> <p>2. Ensure that all lamps and accessories are turned off.</p> <p>3. Turn the ignition OFF and remove the ignition key.</p>	
1	<p>Warning: Refer to Battery Disconnect Warning .</p> <p>Battery Negative Cable Nut</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 4.5 N·m (40 lbin)</p>
2	<p>Battery Negative Cable</p> <p>Procedure</p> <p>1. Disconnect the battery negative cable from the battery.</p> <p>2. After connecting the battery negative cable, insert the ignition key and turn the ignition to the ON position.</p> <p>3. Program the volatile memory. Refer to Control Module References .</p>