


Lower Control Arm Replacement


Removal Procedure

1. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#) .
2. Remove the tire and wheel assembly. Refer to [Tire and Wheel Removal and Installation](#) .

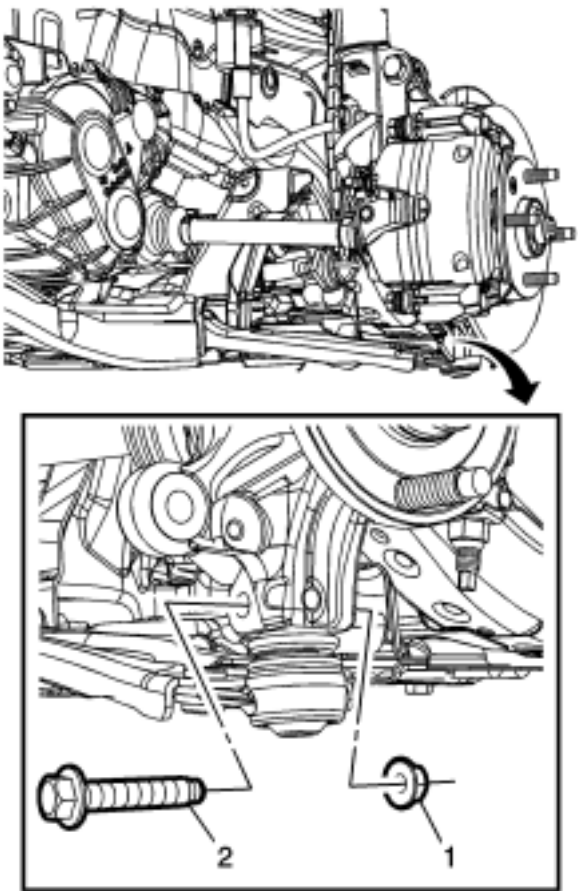

Note: DO NOT reuse the ball joint nut. The nut is NOT reusable.

3. Remove the lower ball joint nut (1) and bolt (2).

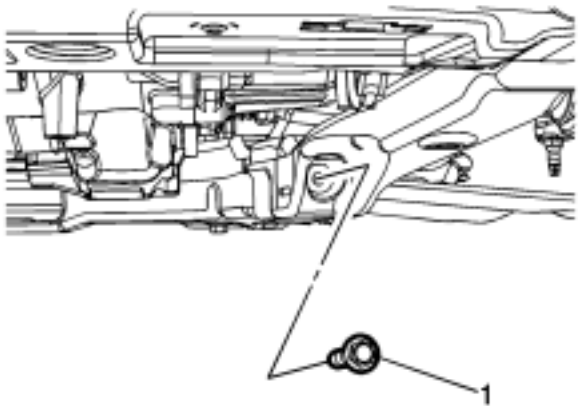

4. Remove and discard the front lower control bolt (1). Replace with NEW only.