


Floor Rear Air Outlet Duct Replacement - Right Side

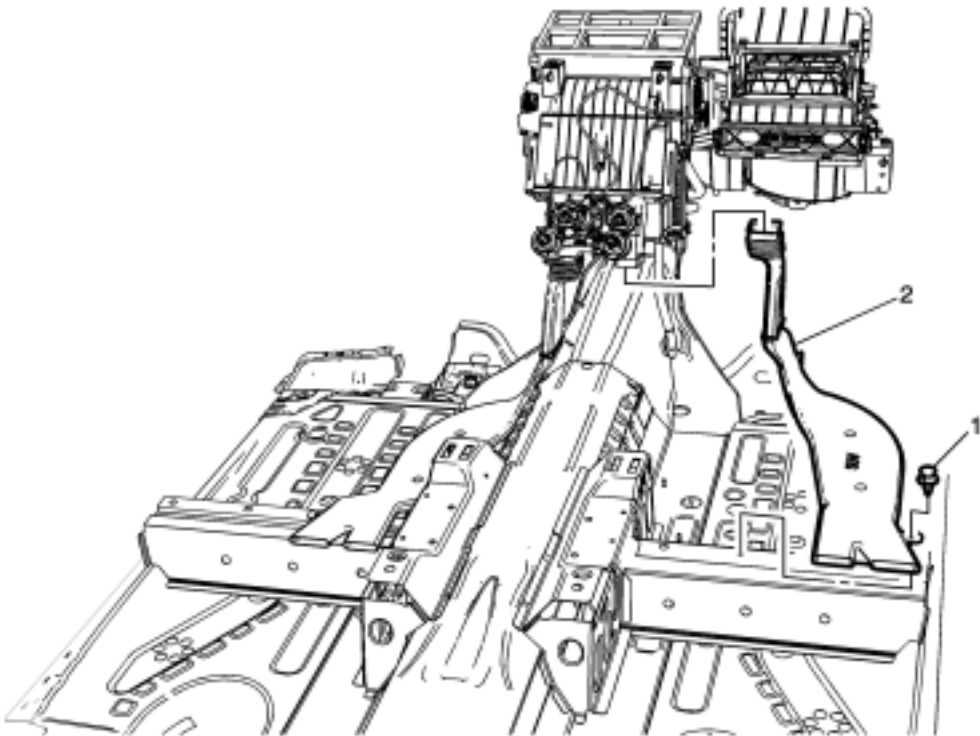

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the front floor I carpet. Refer to Floor Panel Carpet Replacement .</p>	
1	<p>Floor Rear Air Outlet Duct</p> <p>Procedure</p> <p>1. Remove the floor rear air outlet duct fastener.</p> <p>2. If replacing the floor rear air outlet duct, transfer all necessary components.</p>
2	<p>Floor Rear Air Outlet Duct</p>