


Rear Seat Back Cushion Replacement (AMA 60% w/Split Back)

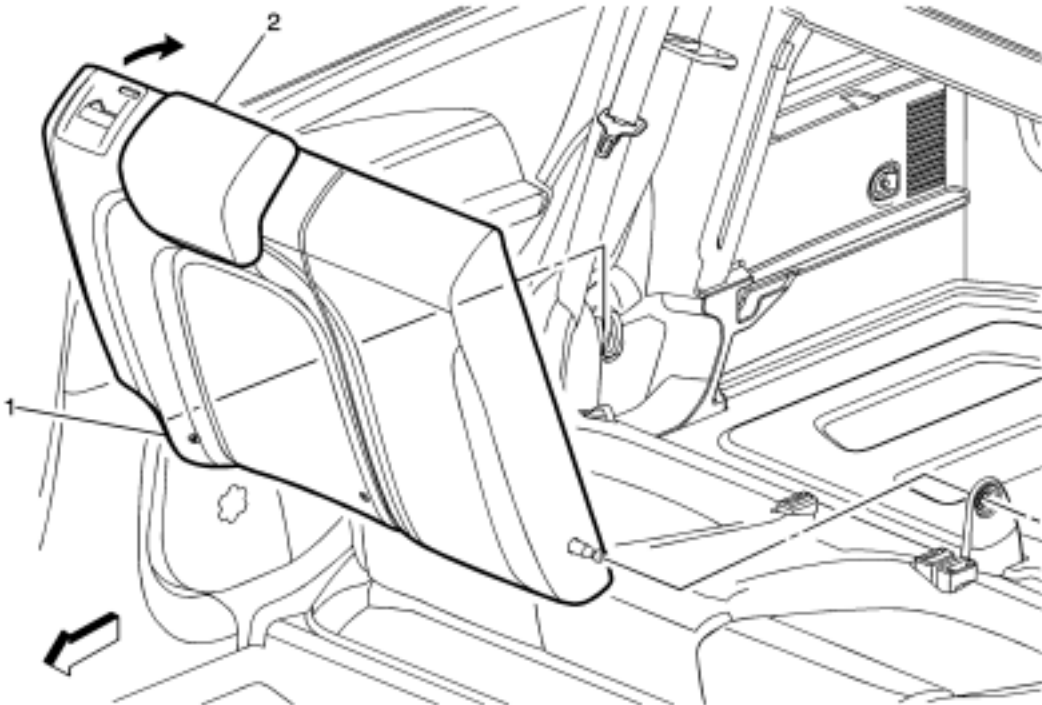

Callout	Component Name
<b>Procedure</b> Remove the rear seat cushion. Refer to <a href="#">Rear Seat Cushion Replacement</a>	
1	<div>Rear Seat Back Cushion Pivot Support</div> <div><b>Procedure</b><ol style="list-style-type: none"><li>Remove the rear seat back cushion 40% side.</li><li>Remove the rear outboard shoulder belts from the shoulder belt bezel and position it out of the way.</li><li>Remove the rear seat center seat belt nut from the rear floor. Refer to <a href="#">Rear Seat Center Shoulder Belt Replacement</a></li><li>Pull the rear seat back cushion latch release located on the top of the rear seat back cushion, and fold the rear seat back cushion forward.</li><li>Push in on the rear seat back cushion pivot support, and release from bracket.</li></ol></div>
2	<div>Rear Seat Back Cushion</div> <div><b>Procedure</b><ol style="list-style-type: none"><li>Pull up on the outer side of the rear seat back cushion and remove the rear seat back cushion from the bracket and hinge.</li><li>Transfer components as necessary.</li></ol></div>