


Rear Compartment Lid Replacement

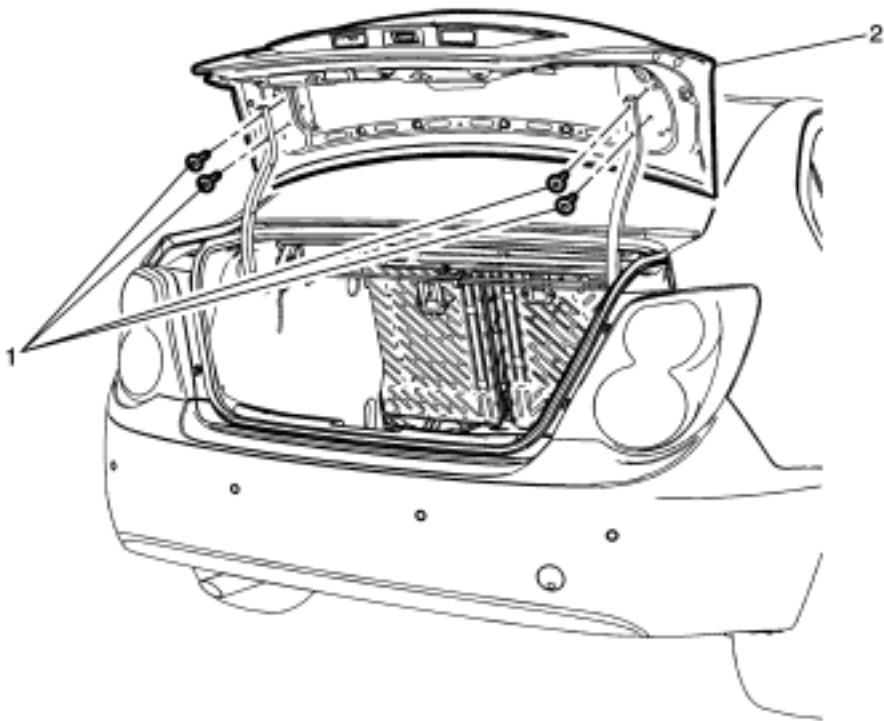

Callout	Component Name
<p><b>Preliminary Procedure</b></p> <p>Remove the rear compartment lid inner panel trim. Refer to <a href="#">Rear Compartment Lid Inner Panel Trim Replacement</a> .</p>	
1	<p>Rear Compartment Lid Bolt (Qty: 4)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> .</p> <p><b>Tighten</b> 9 N·m (80 lbft)</p>
2	<p>Rear Compartment Lid</p> <p><b>Procedure</b></p> <p>1. Disconnect the electrical connector. 2. Adjust the rear compartment lid as needed. Refer to <a href="#">Rear Compartment Lid Adjustment</a> . 3. Transfer components as necessary.</p>