


Outside Rearview Mirror Housing Rear Cover Replacement

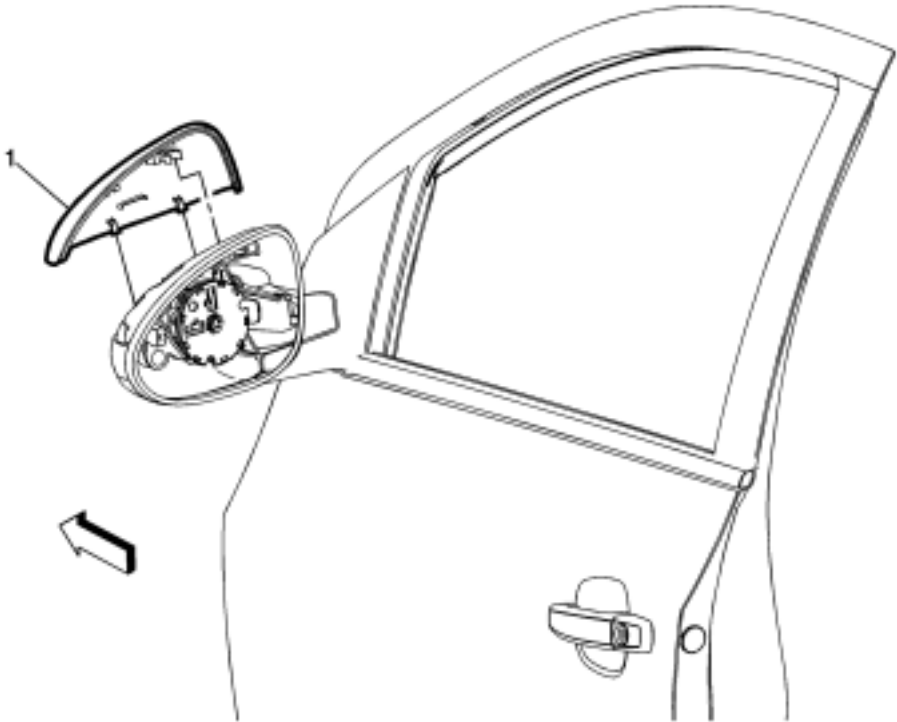

Callout	Component Name
<p><b>Preliminary Procedures</b></p> <p>Remove the outside rearview mirror glass. Refer to <a href="#">Outside Rearview Mirror Glass Replacement</a> .</p>	
1	<p>Outside Rearview Mirror Housing Cover</p> <p><b>Tip</b></p> <p>1. After the mirror glass has been removed the retainers can be accessed to release.</p> <p>2. Align the housing cover with the slots in the mirror housing, push downward locking retainers in place.</p>